


# A426 Bullet Camera Quick Installation Guide

This guide is for quick installing and connecting the A426 Bullet Camera. For more details, please refer to the Hardware Manual.

## Installation Notices

- This camera must be installed by qualified personnel and the installation should conform to all local codes.
- Do not replace batteries of the camera. Risk of explosion may occur if the battery is replaced by an incorrect type.
- Leaving a camera in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas.
- Camera subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
- To use an external power supply, please contact the camera manufacturer to confirm that the power supply complies with the LPS requirements and shares the same power specifications with the camera.
- The means of power cord of adapter should be connected to a socket-outlet with earthing connection.


## Cable

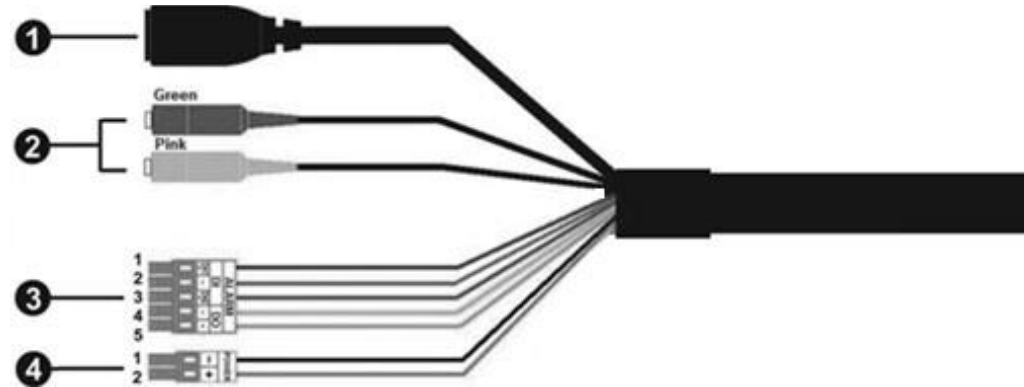

No	Cable	Pin	Definition	Remarks	
1	RJ-45	-	For network and PoE connections		
2	Audio I/O	Green	Audio Out / Mic Out (Line Out)	Two-way audio transmission	
		Pink	Audio In / Mic In (Line In)		
3	Alarm I/O (5-pin Terminal Block)	1	Alarm In 2+	#Do <b>NOT</b> connect external power supply to the alarm I/O connector of the IP camera.	
		2	Alarm In -		
		3	Alarm In 1+		
		4	Alarm Out -		
		5	Alarm Out +		
4	Power (DC 12V / AC 24V) (2-pin Terminal Block)	1	DC 12V -	AC 24V 1	Power connection
		2	DC 12V +	AC 24V 2	

## Memory Card Slot / Reset Button

The positions of the memory card slot and the reset button are shown as below. For details about how to detach the camera's front housing, please refer to the Hardware Manual.

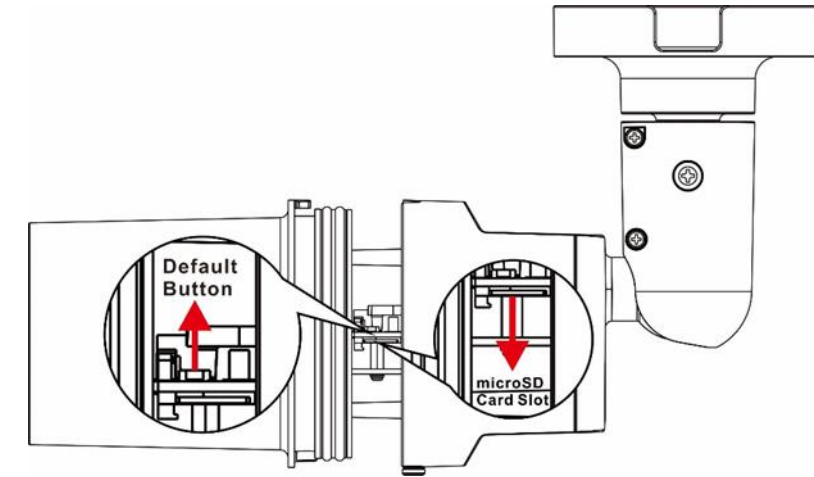

### Memory Card Slot

Insert the memory card into the card slot to store videos and snapshots. Do not remove the memory card when the camera is powered on.



**NOTE:** It is not recommended to record with the memory card for 24/7 continuously, as it may not be able to support long term continuous data read/write. Please contact the manufacturer of the memory card for information regarding the reliability and the life expectancy.

### Reset Button

Press the reset button with a proper tool for at least 20 seconds to restore the system.

## Camera Cabling

Please follow the instructions below for cable connections.

### Power Connection

Please use a DC 12V / AC 24V adaptor and connect it to the 2-pin terminal block power cable and the power outlet. Alternatively, connect the Ethernet cable to the RJ-45 connector of the camera cable, and plug the other end of the cable to a Power Sourcing Equipment (PSE) switch.

### Ethernet Cable Connection

 
Connect one end of the Ethernet cable to the RJ-45 connector of the camera cable, and plug the other end of the cable to the network switch or PC.



**NOTE:** In some cases, Ethernet crossover cable might be needed when connecting the camera directly to the PC.



**NOTE:** Check the status of the link indicator and the activity indicator LEDs. If the LEDs are unlit, please check the LAN connection.



Green Link LED indicates good network connection.  
Orange Activity LED flashes for network activity indication.

## Before Login to the Camera

A client program will be automatically installed to the PC when connecting to the camera. Before logging in to the camera, ensure downloading the ActiveX control is allowed by either changing the ActiveX controls and plug-ins or setting Internet's security level to default. For further details, please refer to the User's Manual.

ActiveX Controls and Plug-ins Settings	Internet Security Level
<b>Step 1:</b> Start the Internet Explorer (IE). <b>Step 2:</b> Select <Tools> from the main menu of the browser. Then click <Internet Options>. <b>Step 3:</b> Click the <Security> tab and select <Internet>, and click <Custom level> to change ActiveX settings. <b>Step 4:</b> Set "ActiveX controls and plug-ins" items to <Prompt> or <Enable>.	<b>Step 1:</b> Start the Internet Explorer (IE). <b>Step 2:</b> Select <Tools> from the main menu of the browser. Then click <Internet Options>. <b>Step 3:</b> Click the <Security> tab and select <Internet>. <b>Step 4:</b> Down the page, click "Default Level" and click <OK> to confirm the setting. Close the browser window, and open a new one later for accessing the IP camera.

## Camera Login

The default IP address of the camera is: **192.168.0.100**. Therefore, to access the camera for the first time, please set the IP address of the PC as: 192.168.0.XXX; for example:

**IP Address: 192.168.0.99**

**Subnet Mask: 255.255.255.0**

## Login ID and Password

- Type in corresponding camera IP address into the URL field on the web browser and hit "Enter".
- For initial login, use the default username, "admin", and then setup the password. Follow the on-screen instructions to do so. This username and password will be used for succeeding login. Note that the username and password are case sensitive.

**Default Username: admin**


**Password: (user must setup first)**

## Install the ActiveX Control

- After connecting to the camera, the request for installing the ActiveX control will appear just below the URL bar.
- Right click on the information bar, and then click on <Install ActiveX Control...> to permit ActiveX control installation.
- In the pop-up security warning window, click on <Install> to start downloading the software on the PC.
- Click on <Finish> after installation is completed.

## Browser-based Viewer

The main page of the IP camera user interface is shown as the figure below. Please note that function buttons will vary depending on the camera model.

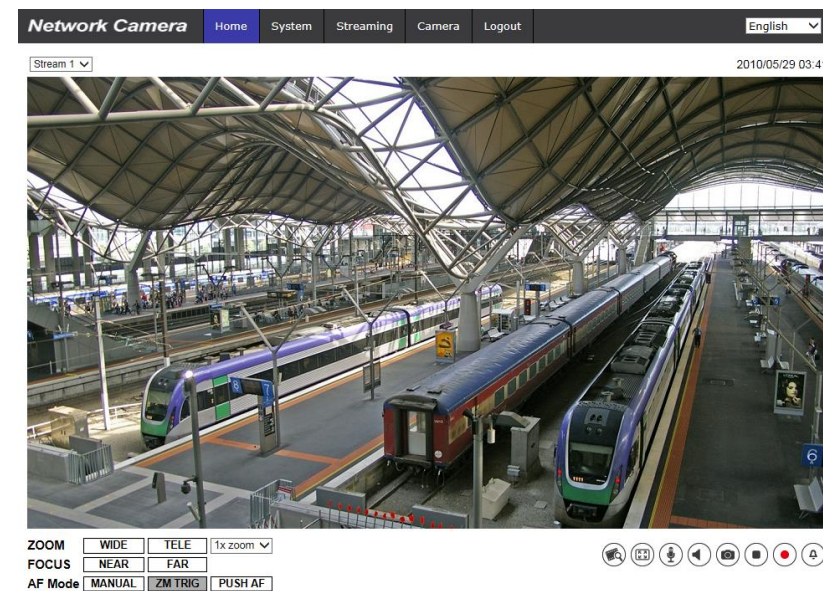

# A426 Bullet Camera Quick Installation Guide