



Indoor PTZ

Mounting on a Straight Wall Using the L-Bracket

Installation Guide

For Models:

I91, I92, KCM-8111

2013/12/09



ACTi
Connecting Vision

Table of Contents

- Installation Procedures 3**
 - Step 1: Install the L-Type Wall Mount..... 3**
 - Step 2: Install the Camera..... 5**
 - Step 3: Access the Camera Live View..... 6**

- Safety Information..... 7**

Installation Procedures

To install the camera on a straight wall, use the L-Type Wall Mount. The camera will be facing down as if installed on a ceiling.

NOTE: The L-Type Wall Mount is not included in the camera package. Contact your sales agents to purchase.

Before installation, prepare the following:

L-Type Wall Mount Package	Other Tools (not supplied)
<ul style="list-style-type: none"> • L-Type Wall Mount • Drill template • Screws (3) 	<ul style="list-style-type: none"> • Phillips screwdriver

Step 1: Install the L-Type Wall Mount

1. Use the drill template (included in the L-type wall mount package) to mark and drill the mounting holes on the wall.
2. Route the network cable and other cables (if any).


NOTE:

- Other cables refer to cables of an external power adapter, audio input/output and digital input/output devices.
- To illustrate how to connect other device cables to the camera, the following images show the cable of an external power adapter (not included in the package). Same cable routing applies to other devices. To connect a power adapter or a digital input/output device, the bundled terminal block must be attached to the cables. For more information on connecting the terminal blocks, refer to the camera model Hardware Manual downloadable from the website (www.acti.com).

- 2a. **If the cable(s) will pass through the wall**, insert the cable(s) through the cable hole as marked below (A).



- 2b. **If the cable will go along the wall**, remove the pre-cut tab on the L-type wall mount using pliers. Then route the cable through the cable holes (A to B) as marked below.

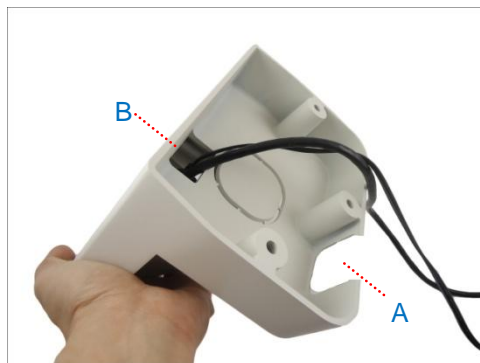

3. With the cable(s) dangling, attach three (3) screws (included in the camera package) to install the L-type wall mount onto the wall.



Step 2: Install the Camera

1. If necessary, insert a memory card into the card slot of the camera.
2. Connect the network cable to the Ethernet port of the camera. If necessary, connect the other cables (such as power adaptor, DI/DO, etc.) to the corresponding connectors.



3. Align and insert the camera base hooks to the mounting holes.



4. Slide the camera clockwise to secure the hooks to the mount.



5. Attach three (3) screws (included in the L-type wall mount package) to secure the camera to the mount.



Step 3: Access the Camera Live View

Refer to the camera Hardware Manual downloadable from the website (www.acti.com) for more information.

Safety Information

Read these instructions

You should read all the safety and operating instructions before using this product.

Heed all warnings

You must adhere to all the warnings on the product and in the instruction manual. Failure to follow the safety instruction given may directly endanger people, cause damage to the system or to other equipment.

Trademarks

All names used in this manual are probably registered trademarks of respective companies.

Liability

Every reasonable care has been taken during the writing of this manual. Please inform your local office if you find any inaccuracies or omissions. We cannot be held responsible for any typographical or technical errors and reserve the right to make changes to the product and manuals without prior notice.

Cleaning

Disconnect this video product from the power supply before cleaning.

Attachments

Do not use attachments not recommended by the video product manufacturer as they may cause hazards.

Do not use accessories not recommended by the manufacturer

Only install this device in a dry place protected from weather

Servicing

Do not attempt to service this video product yourself. Refer all servicing to qualified service personnel.

Damage Requiring service

Disconnect this video product from the power supply immediately and refer servicing to qualified service personnel under the following conditions.

- 1) When the power-supply cord or plug is damaged
- 2) If liquid has been spilled, or objects have fallen into the video product.
- 3) If the inner parts of video product have been directly exposed to rain or water.
- 4) If the video product does not operate normally by following the operating Instructions in this manual. Adjust only those controls that are covered by the instruction manual, as an improper adjustment of other controls may result in damage, and will often require extensive work by a qualified technician to restore the video product to its normal operation.

Safety Check

Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine if the video product is in proper operating condition.