

Multilingual Version

[English](#)

[中文](#)

[Español](#)


CAMERA INSTALLATION

To check the complete user manual, scan the QR code or go to www.surveillance-download.com/user/m571.swf

To download the free PC CMS software (CMS Lite), please check the supplied CD or go to www.surveillance-download.com/user/m571.swf



Standard package

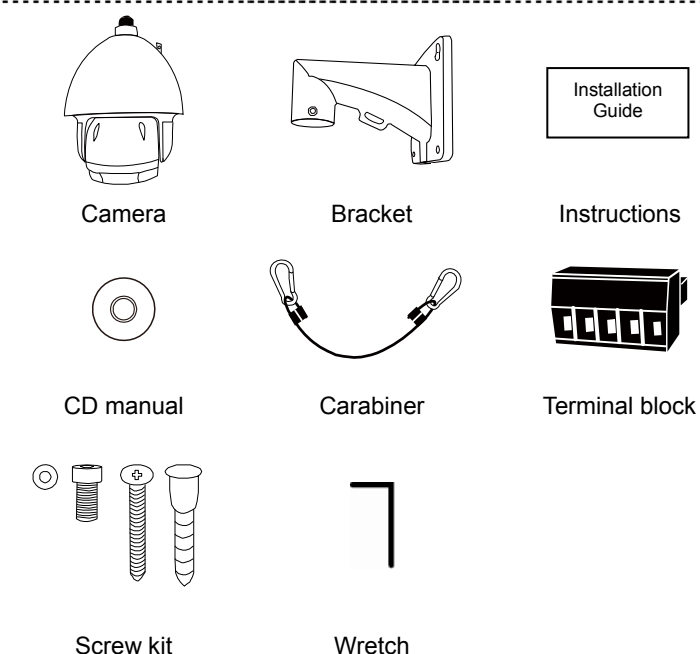

For selected models only



Waterproof kit

Installation 1

Step 1: Set the camera ID and baud rate when this camera is going to be used with other brand's NVR.

NOTE: For details, please check the section, "**SET CAMERA ID & BAUD RATE**".

Step 2: Locate to where you want to install this camera and drill 4 holes for bracket installation. (Figure 1)


NOTE: The installation sticker file could be downloaded from www.surveillance-download.com/user/592_installation_sticker.pdf.

Step3: (Optional) Insert a microSD card for local recording.

NOTE: The recording function is available only when the camera is used as an IP camera. For details, please check the next section, "**INSERT A MICRO SD CARD**".

Step 4: Pass the cables on the camera through the bracket and hook them together with the carabiner and wire. (Figure 2)


Step 5: Lean them against the wall where you want to install this camera. Arrange the cables to the down side of the bracket or through the wall. (Figure 3)

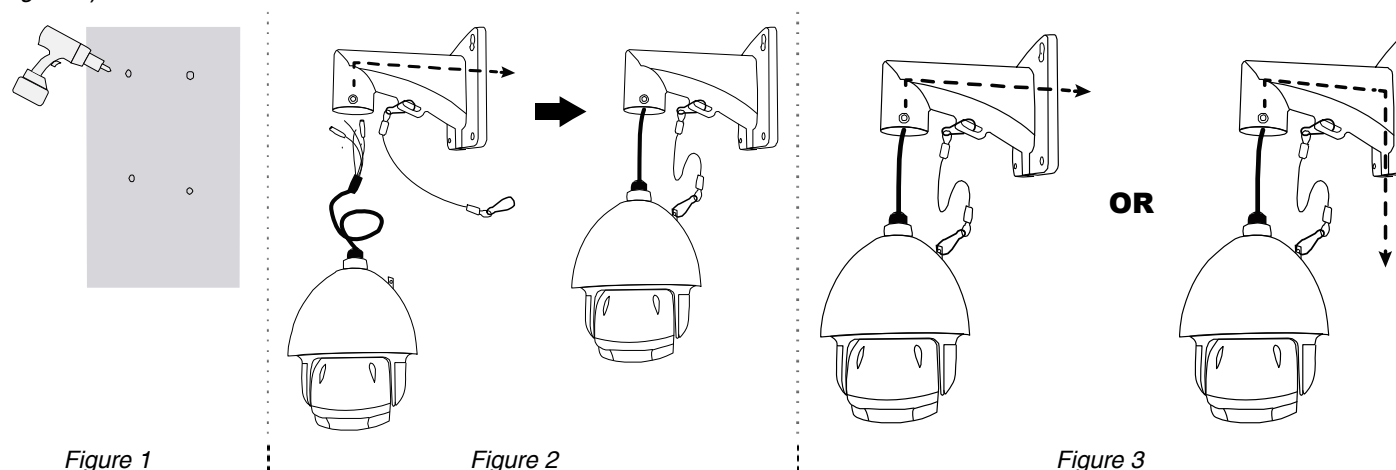

Step 6: Screw the bracket onto the wall. (Figure 4)

NOTE: You might need another hand to hold the camera in this step.

Step 7: Screw the bracket and camera together. (Figure 5)

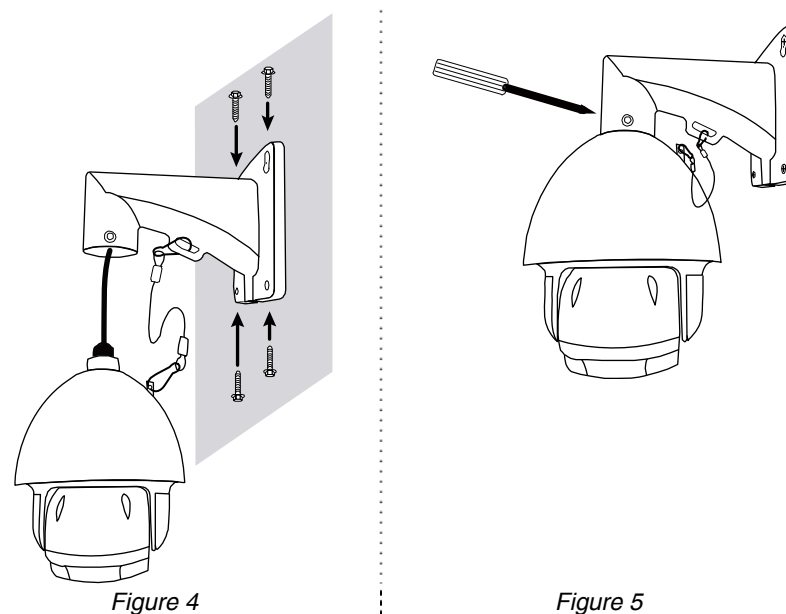

■ CABLE OVERVIEW

Cable	Description
Power cable	Connect to the supplied adapter.
RJ45 network cable*	Connect to an Ethernet network cable.
BNC cable	No function.
Terminal block	
1. ALARM IN	Alarm input for an alarm device like magnetic contacts.
2. ALARM OUT	Alarm output for an alarm device like a siren.
3. GND	Ground wire
4. RS485_A	Used for PTZ camera or other device connection.
5. RS485_B	Used for PTZ camera or other device connection.
Line-in	Colored as blue, used to connect to a microphone for audio input.
Line-out	Colored as green, used to connect to a speaker for audio output.
RESET	A wire reserved for hardware reset.
GND	Remove the insulating coating of the wire, and twist it with the GND wire together to reset the camera to its factory values.

* For PoE (IEEE802.3af) installation, make sure your network cable has the maximum cable resistance of 20Ω, such as CAT.5e or CAT.6 cables, to conform to the standard of IEEE802.3af.

■ INSERT A MICRO SD CARD

The data originally saved in the microSD card (if any) will be removed after inserting it to the camera.

The camera doesn't support hot-swapping. Please insert or remove the microSD card with power disconnected.


Please follow the directions in the below graphic to insert MicroSD card properly.

Step 1: Remove the four screws. Then remove the plastic cover.

Step 2: After opening the camera hull, you can see the inner structure.

As the below illustration shows, insert the SD card face down into the slot.

Step 3: Replace the hull back, and make sure it's fastened tightly to ensure the waterproof function works properly.

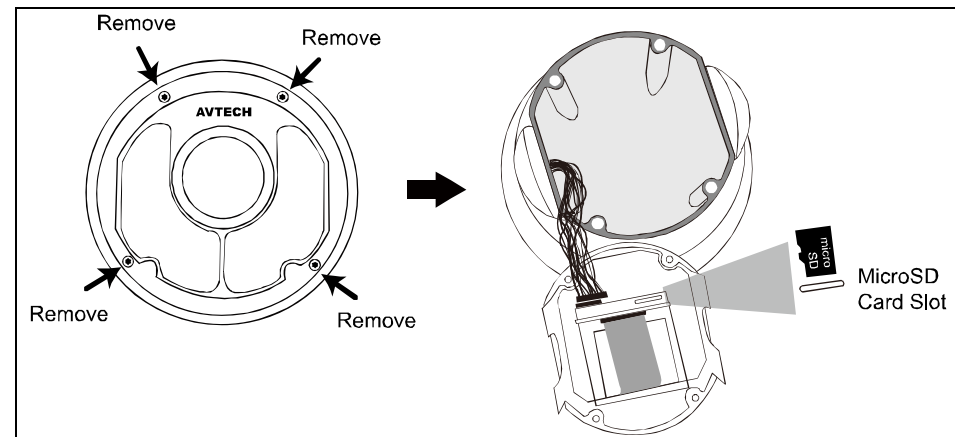


■ DEFAULT VALUES

IP address	192.168.1.10
Port number	88
User name	admin
Password	admin

It's strongly recommended to change the default user name and password before using the camera to keep your account safe.

To change the default account, log into the camera, and go to **Config.** → **General** → **Account**. Create a new account, and remove the default one.

■ WATERPROOF KIT FOR NETWORK CABLE (Optional)

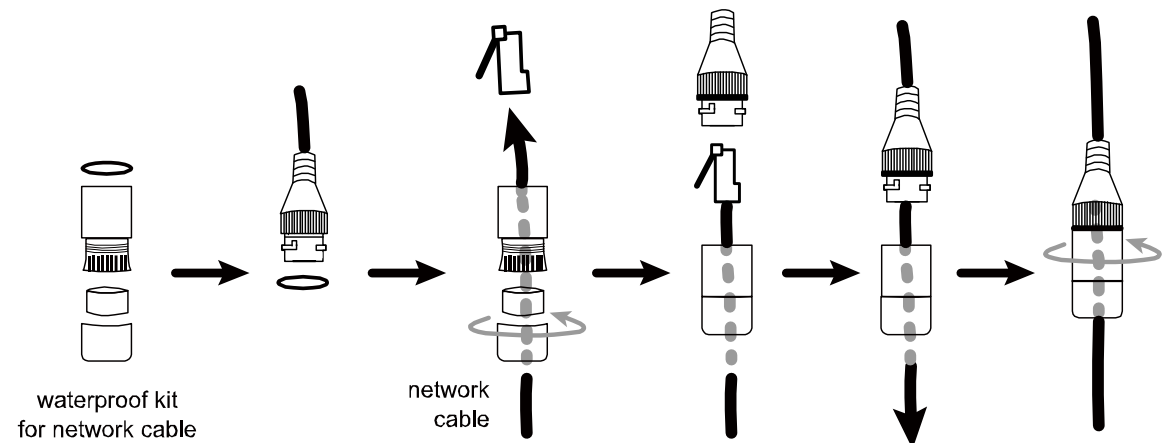


■ SET CAMERA ID AND BAUD RATE

Before connecting this camera to other brand's NVR, you may need to manually set the ID & baud rate for the camera to work properly. Please check the description below for details.

Note: The on / off of the DIP switch is shown as gray.


■ Where to set

Remove the panel as indicated below to find the dip switch.

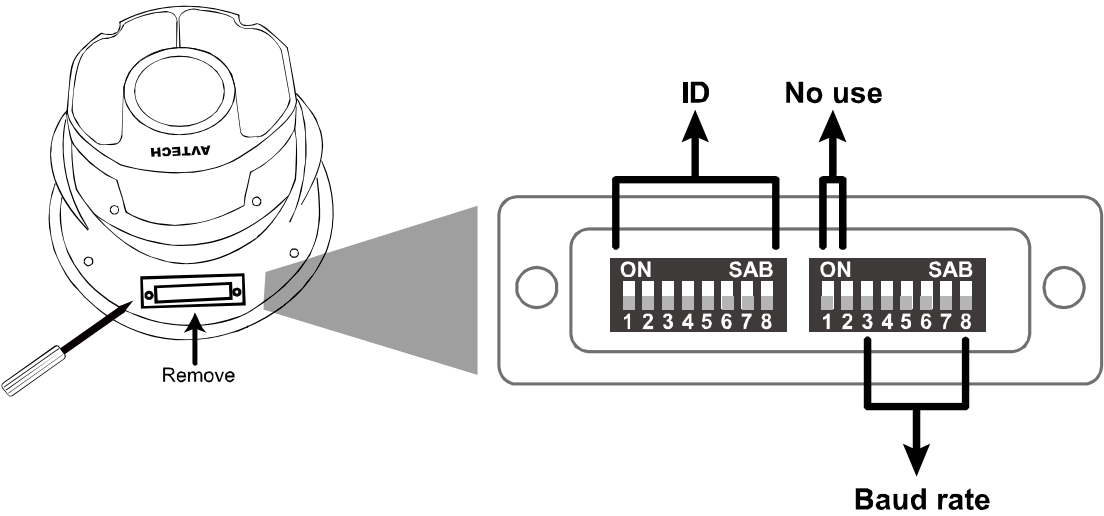


■ ID

The ID number can be set from 0~255 (binary). Please check the examples below.



■ Baud Rate

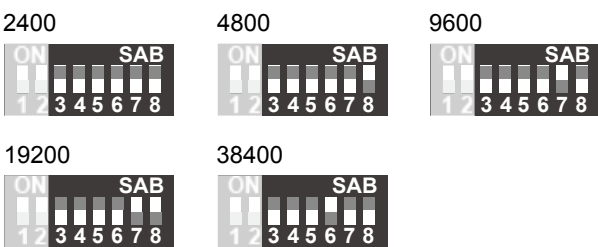

■ SYSTEM CONNECTION

1. Connect IP cameras and a monitor to the NVR, and power on the NVR, as illustrated below.


Note: Local connection only allows monitoring locally. To monitor from anywhere other than the NVR is installed, please connect your NVR to Internet.

2. Wait till each camera is configured automatically and you will see camera images on the monitor soon.

Note: Local connection only allows monitoring locally. To monitor from anywhere other than the NVR is installed, please connect your NVR to Internet.


Type1

Connect IP cameras
(as many as the NVR supports):

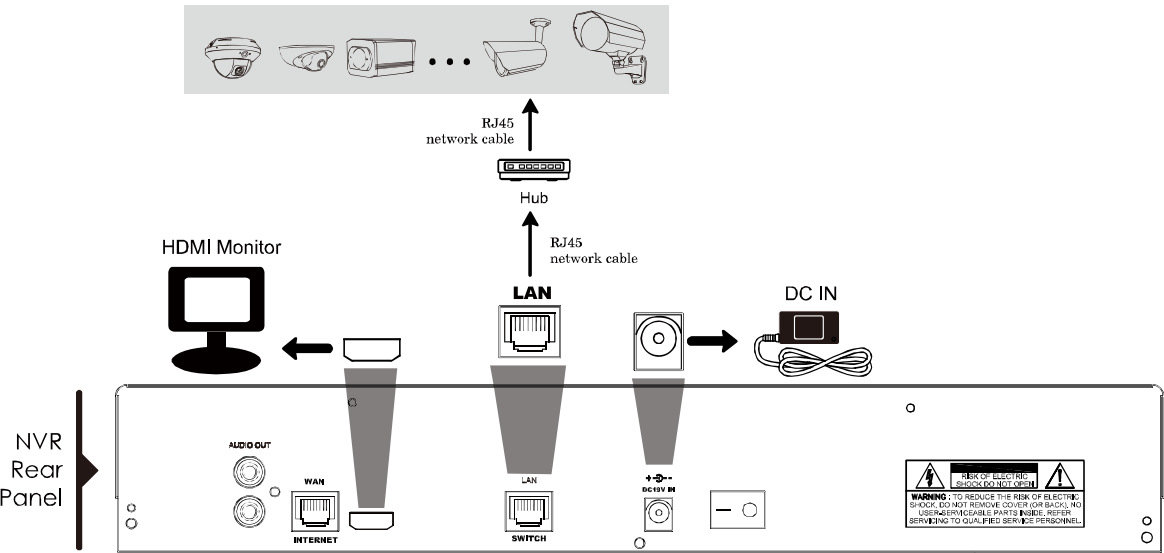


Type2

Connect IP cameras
(as many as the NVR supports):

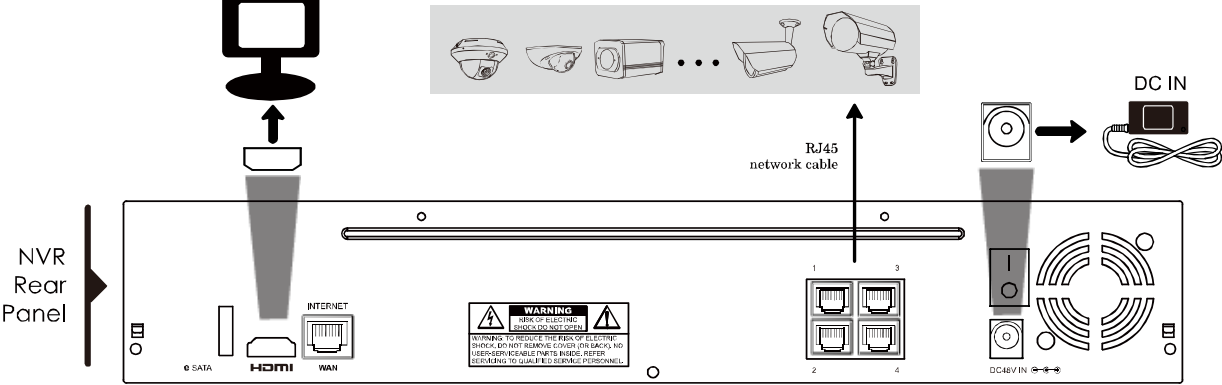

■ CAMERA INSTALLATION


■ TYPE1

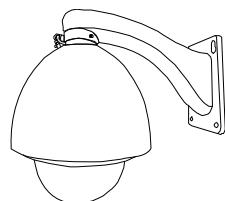

▼ Standard package



Camera

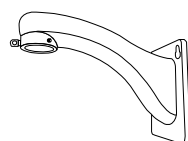

Bracket



Carabiner



Instructions



CD manual

Step 1: Loosen the screws on the dome cover to remove it (as shown in *Figure 1*), and take all EPE foam rolls off in the camera.

NOTE: When you remove the EPE foam rolls, please be careful not to damage the inner mechanism of the camera.

Step 2: Install a microSD card if needed. Then, replace the cover back.

NOTE: Make sure the dome cover is clean without fingerprints before replacing it back.

Step 3: Pass the cables to be connected through the bracket, and fasten the bracket to the wall (as shown in *Figure 2*).

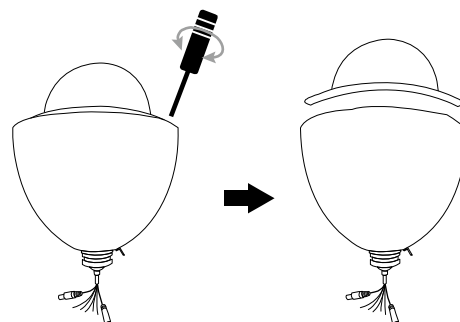


Figure 1

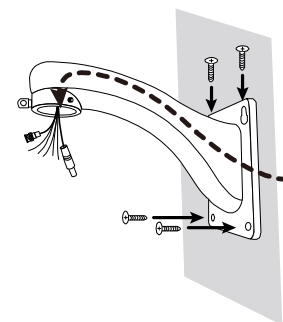


Figure 2

Step 4: Hook the camera and the bracket together with the supplied carabiner, and connect the cables. Then, pull the cables from the other side of the bracket to hide the connectors in the bracket.

Step 5: Insert the camera to the bracket, and rotate the camera a little bit to hook it. Then, use a wrench to fasten the screws on the two sides of the bracket to secure the connection.

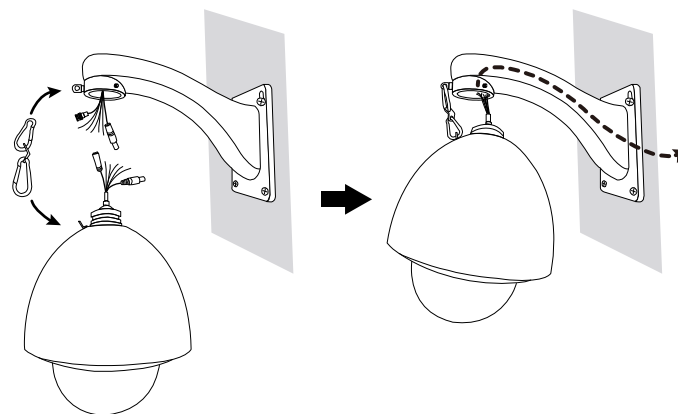


Figure 3



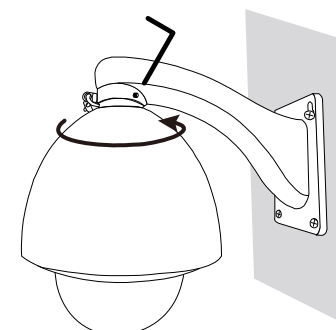


Figure 4

■ TYPE2

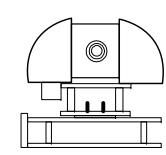

▼ Standard package



Camera



Instructions



CD manual

▼ For selected models



Rubber O-ring



Waterproof Seal




Plastic Tube Cover




Plastic Tube

Waterproof kit

Below is the bracket we have to use with this camera, and it is not supplied in the camera sales package. Please purchase separately.

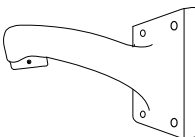

Bracket

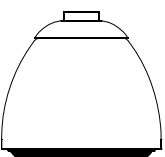

Housing



Dome cover

The accessories:



Wrench



Screws

Step 1: (Optional) Insert the microSD card if needed

Step 2: Arrange the position of the cables on the wall, pass the cables through the bracket, and secure the bracket to the wall with four screws (Figure 1).

Note: The four screws used to secure the bracket to the wall are not supplied in the sales package.

Step 3: Pass the camera cables through the hole in the middle of the housing (Figure 2).

Step 4: Align the screw holes of camera plate with the four screw holes on the bracket in the housing (Figure 3). Then, fix the module to the housing with the supplied four screw holes.

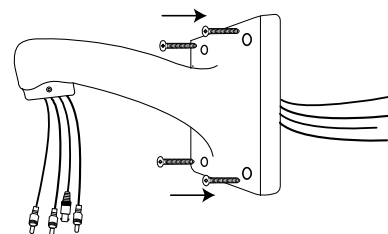


Figure 1

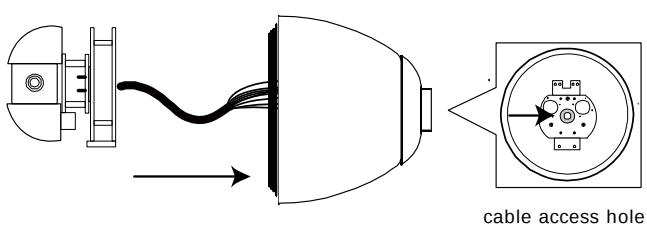


Figure 2

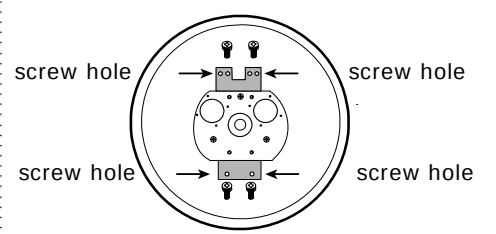


Figure 3

Step 5: Connect the cables on the wall to the cables of the camera (Figure 4).

Step 6: Collect and hide the cables in the bracket and lock the housing with the wrench to the bracket (Figure 5).

Step 7: Put the dome cover on the housing and rotate it counterclockwise to fix (Figure 6).

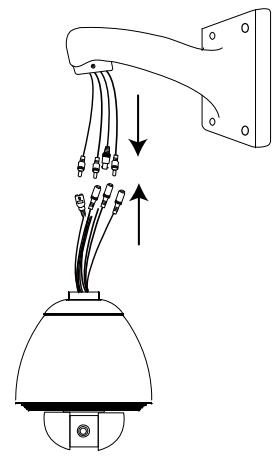


Figure 4

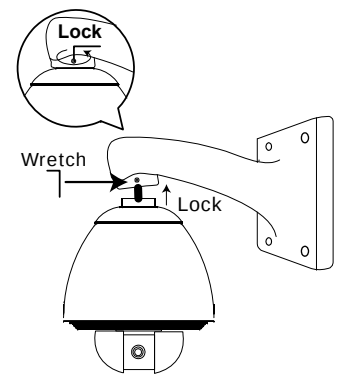


Figure 5


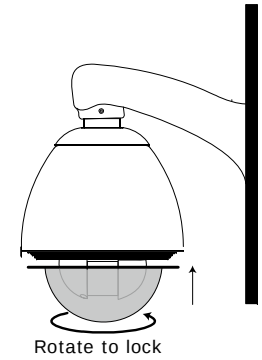


Figure 6

■ WATERPROOF KIT (For selected models only)

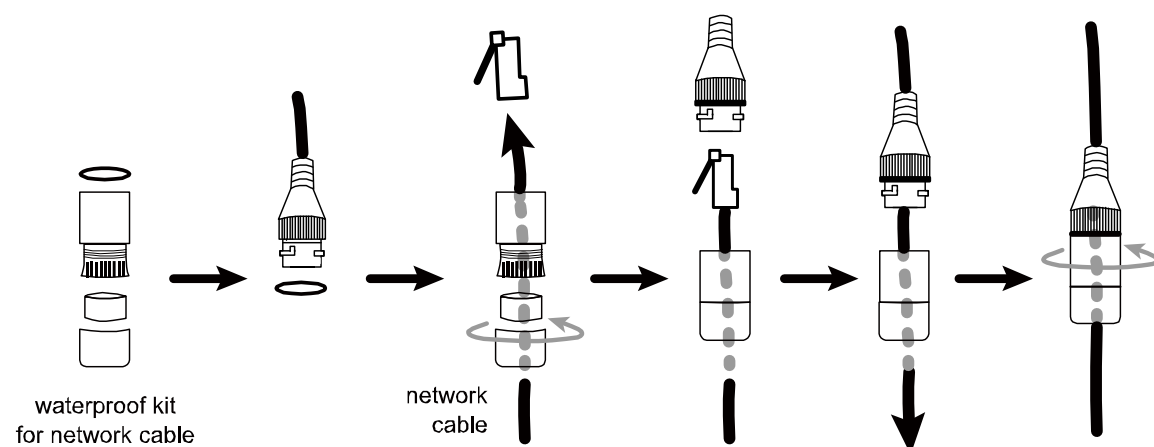

■ CABLE OVERVIEW

Cable	Description
Power cable	DC12V power supply.
RJ45 network cable*	Connect it to a RJ45 cable.
GND	A wire or a wire connected to a terminal block depending on the model you have, reserved for external alarm device connection.
Alarm-in**	
Alarm-out**	
RESET	A wire reserved for hardware reset. Remove the insulating coating of the wire, and twist it with the GND wire together to reset the camera to its factory values.
Line-in**	Colored as blue, used to connect to a microphone for audio input.
Line-out**	Colored as green, used to connect to a speaker for audio output.

* For PoE (IEEE802.3af) installation, make sure your network cable has the maximum cable resistance of 20Ω , such as CAT.5e or CAT.6 cables, to conform to the standard of IEEE802.3af.

** For selected models only

■ DEFAULT VALUES

IP address	192.168.1.10
Port number	88
User name	admin
Password	admin

It's strongly recommended to change the default user name and password before using the camera to keep your account safe.

To change the default account, log into the camera, and go to **Config. → General → Account**. Create a new account, and remove the default one.

■ INSERT A MICRO SD CARD

FOR TYPE 1

The data originally saved in the microSD card (if any) will be removed after inserting it to the camera.

The camera doesn't support hot-swapping. Please insert or remove the microSD card with power disconnected.

Step 1: With the cover removed, find the microSD card slot on the green board in the camera.

Step 2: Insert the microSD card to the slot.

Please do not insert the card forcedly. If you feel resistance, please try the other side.

Note: It's recommended to use a pair of tweezers for inserting / removing the microSD card.

FOR TYPE 2


The data originally saved in the microSD card (if any) will be removed after inserting it to the camera.

The camera doesn't support hot-swapping. Please insert or remove the microSD card with power disconnected.

Please follow the directions below to insert the microSD card properly:

Step 1: Arrange the lens with the PCB board to find the microSD card socket as the illustration below.

Step 2: Face the golden contacts up of the microSD card and insert it into the socket.

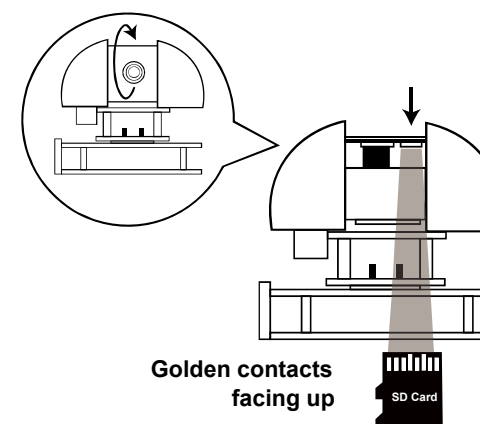

■ CAMERA INSTALLATION


To check the complete user manual, scan the QR code or go to www.surveillance-download.com/user/m571.swf

To download the free PC CMS software (CMS Lite), please check the supplied CD or go to www.surveillance-download.com/user/m571.swf



■ TYPE1

▼ Standard package

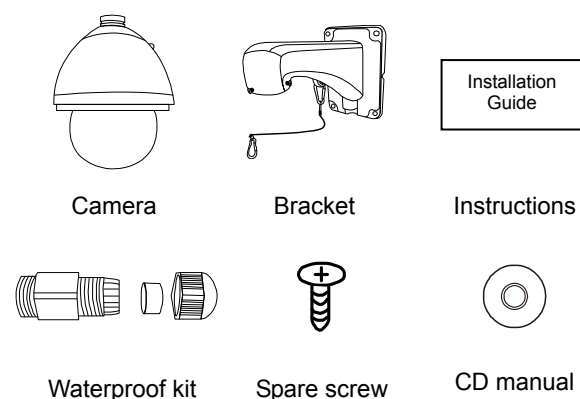

■ Installation 1


Step 1: Locate to where you want to install this camera, and drill four screw holes for bracket installation later, and one hole for the cable to go through.

NOTE: The installation sticker file could be downloaded from www.surveillance-download.com/user/592_installation_sticker.pdf.

Step 2: Pass the cables to be connected through the bracket, and fasten the bracket to the wall.

Step 3: Hook the camera and the bracket together with the supplied carabiner, and connect the cables. Then, pull the cables from the other side of the bracket to hide the connectors in the bracket or behind the wall.

Step 4: Insert the camera to the bracket, and fasten the three screws as indicated in Figure 3 to secure the connection.

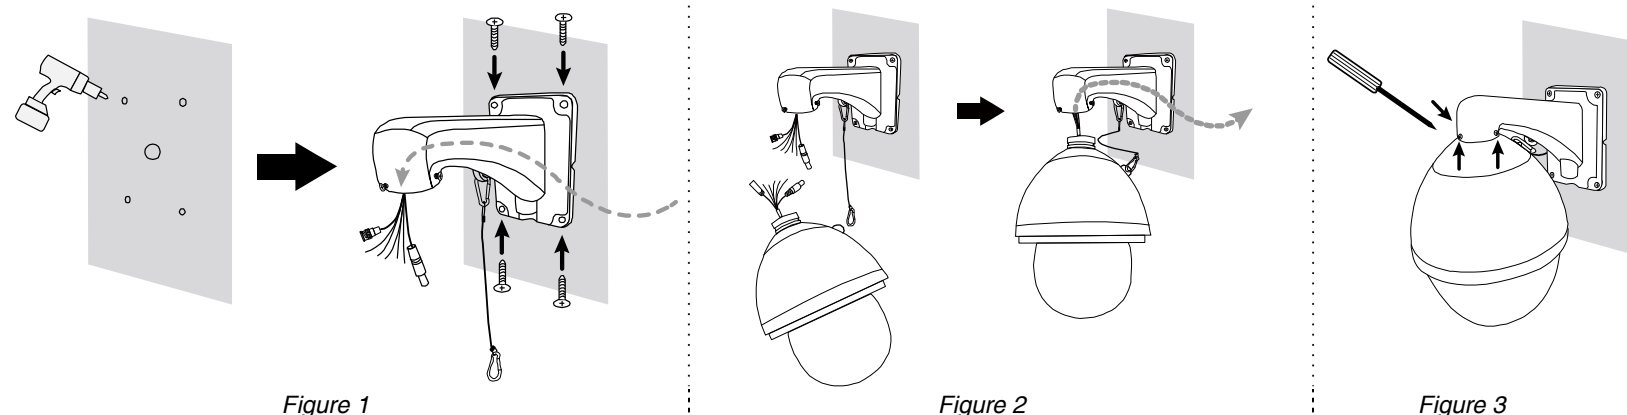

■ Installation 2

Step 1: Locate to where you want to install this camera, and install a function box near it with the cables to be connected placing inside.

NOTE: For the cables placing into the junction box, make sure the waterproof protection is made properly.

Step 2: Pass the cables on the camera through the bracket, and fasten the camera to the bracket by securing the three screws as indicated in Figure 2.

Step 3: Locate to where you want to install this camera, and drill four screw holes for bracket installation later.


NOTE: The installation sticker file could be downloaded from www.surveillance-download.com/user/592_installation_sticker.pdf.

Step 4: Arrange the cables to the right side of the bracket as indicated in Figure 3, and fasten the bracket to the wall.


NOTE: It's recommended to use hex flange bolts to secure the bracket to the wall.

Step5: Place the camera cables into a function box as indicated in Figure 4, and connect to the cables placed in Step1.


NOTE: For the cables hidden in the junction box, make sure the waterproof protection is made properly.

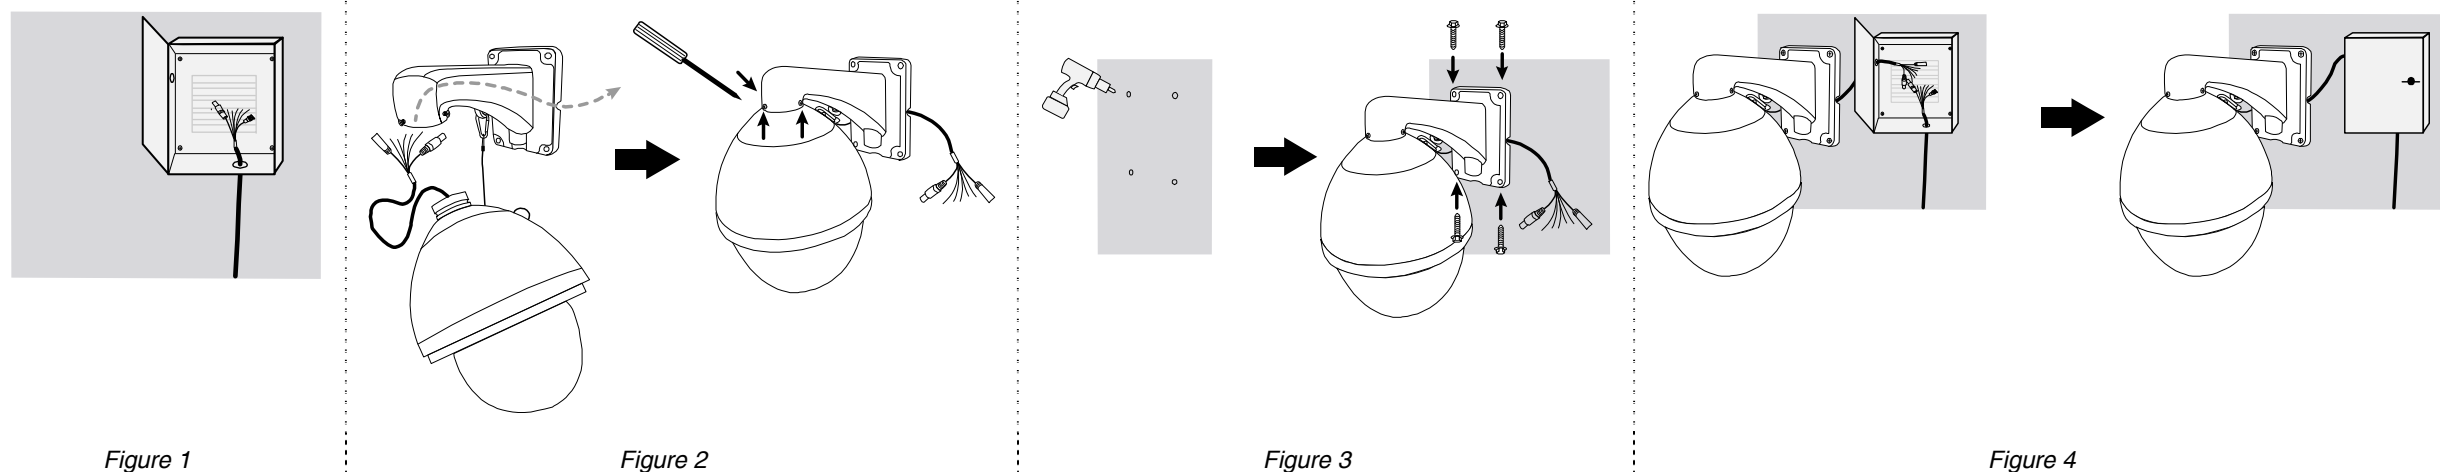

■ TYPE2



▼ Standard package



Camera

Instructions

CD manual

▼ Optional Accessory



Rubber O-ring

Waterproof Seal



Plastic Tube Cover

Plastic Tube

Waterproof kit

Below is the bracket we have to use with this camera, and it is not supplied in the camera sales package. Please purchase separately.



Bracket

Mounting base

The accessories:

x 3 Hex screw nut

x 4 Wall screws and plugs

x 3 M6 Nylok screw (long)

x 1 Bracket screw (phillips)

x 2 M6 Nylok screw (short)

x 1 Bracket screw (hex socket)

x 2 Mounting base screw

x 1 Cap

x 1 M4 screw

Note: Here shows how to install the camera with the optional bracket mentioned on the left.


Step 1: Find the bracket and remove its upper cover, and install the bracket to the wall. Before attach the bracket to the wall, make sure how the cabling should go:

- For cabling along the wall, arrange the camera cable through one of the gaps.
- For cabling through the wall, remember to drill a hole big enough for the cable to go through.

Step 2: Fasten the bracket to the wall (*Figure 1*).

Step 3: Insert the hex screw nuts to the mounting base, and turn it around (*Figure 2*).


Step 4: Find “→” on the camera. Then, place and fasten the mounting base to the camera as indicated below (*Figure 3*).

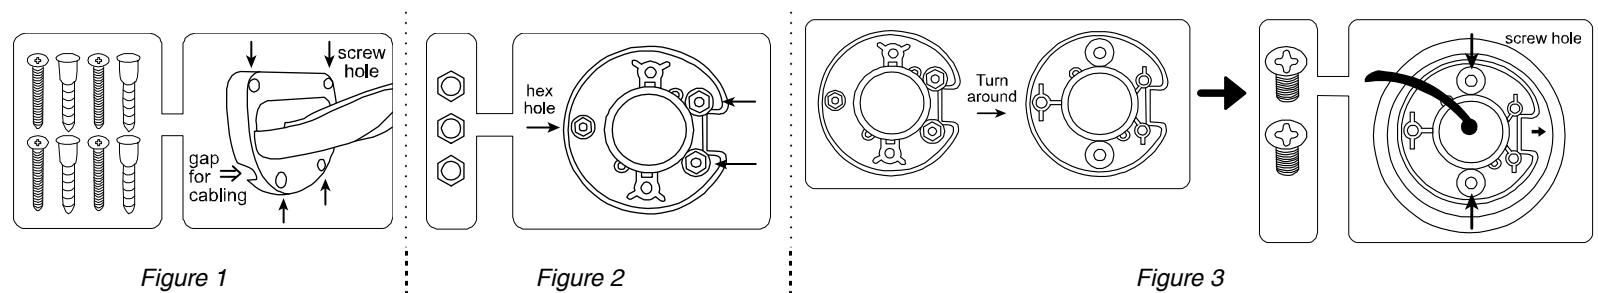


Step 5: Attach and slightly fasten the camera to the bracket as indicated below. The camera is hooked (*Figure 4*).

Step 6: Slightly secure the camera and the bracket as indicated below (*Figure 5*).

Step 7: Fasten the camera to the bracket with the M4 screw as indicated below (*Figure 6*).

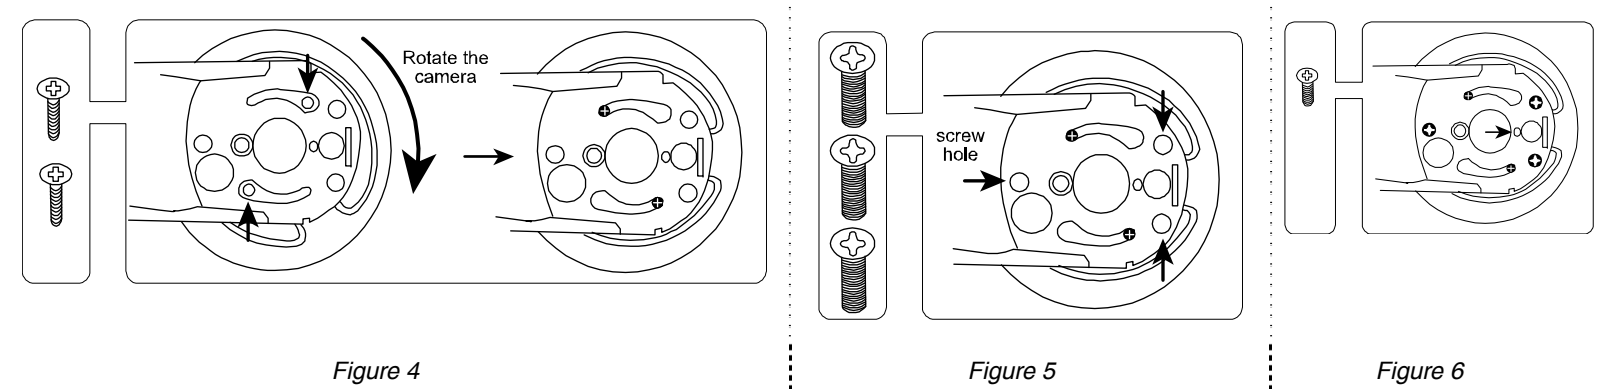

Step 8: Replace the upper cover of the bracket back, and fasten it with a Philips screw or a hex socket screw, and put the cap on it to finish the installation (*Figure 7*).

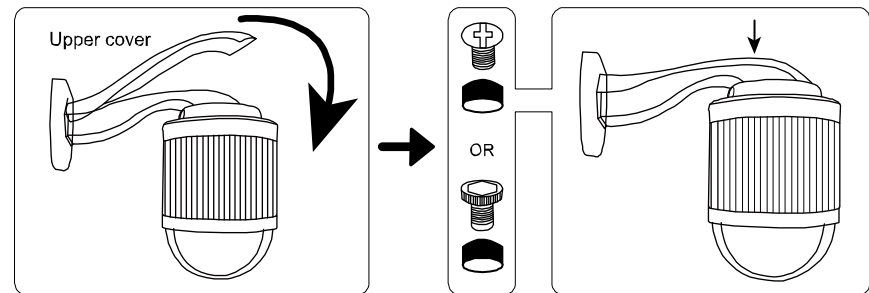

■ CABLE OVERVIEW

For Type 1

Cable	Description
Power cable	Connect to the supplied adapter.
RJ45 network cable*	Connect to an Ethernet network cable.
Terminal block	
1. ALARM IN	Alarm input for an alarm device like magnetic contacts.
2. ALARM OUT	Alarm output for an alarm device like a siren.
3. GND	Ground wire
4. RS485_A	Used for PTZ camera or other device connection.
5. RS485_B	Used for PTZ camera or other device connection.
6. GND	Ground wire
7. RST	Remove the insulating coating of wire, and twist it with a ground wire together to reset default camera
BNC cable	No function
Ain	Connect to a microphone for audio recording.
Aout	Connect to a speaker for audio broadcasting.

* For PoE (IEEE802.3af) installation, make sure your network cable has the maximum cable resistance of 20Ω , such as CAT.5e or CAT.6 cables, to conform to the standard of IEEE802.3af.

For Type 2

Cable	Description
Power cable	DC12V power supply.
RJ45 network cable*	Connect it to a RJ45 cable.
GND	A wire or a wire connected to a terminal block depending on the model you have, reserved for external alarm device connection.
Alarm-in	
Alarm-out	
RESET	A wire reserved for hardware reset. Remove the insulating coating of the wire, and twist it with the GND wire together to reset the camera to its factory values.
Line-in**	Colored as blue, used to connect to a microphone for audio input.
Line-out**	Colored as green, used to connect to a speaker for audio output.

* For PoE (IEEE802.3af) installation, make sure your network cable has the maximum cable resistance of 20Ω , such as CAT.5e or CAT.6 cables, to conform to the standard of IEEE802.3af.

** For selected models only

■ INSERT A MICRO SD CARD (Type 1 Only)

The data originally saved in the microSD card (if any) will be removed after inserting it to the camera.


The camera doesn't support hot-swapping. Please insert or remove the microSD card with power disconnected.

Step 1: Remove the four screws. Then remove the plastic cover.

Step 2: After removing the plastic hull, you can see the inner structure.


As the below illustration shows, insert the SD card face down into the slot.

Step 3: Replace the cover and fasten the screws. Please make sure the cover is secured to ensure the waterproof mechanism.

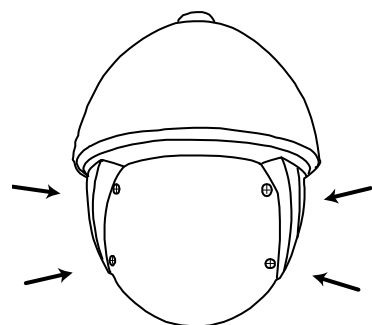

Remove the four screws

Figure 1

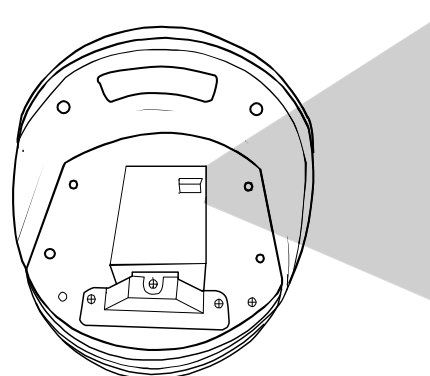

Insert the MicroSD card face down.

Figure 2

■ DEFAULT VALUES

IP address	192.168.1.10
Port number	88
User name	admin
Password	admin

It's strongly recommended to change the default user name and password before using the camera to keep your account safe.


To change the default account, log into the camera, and go to **Config. → General → Account**. Create a new account, and remove the default one.

SYSTEM CONNECTION

1. Connect IP cameras and a monitor to the NVR, and power on the NVR, as illustrated below.

Note: Local connection only allows monitoring locally. To monitor from anywhere other than the NVR is installed, please connect your NVR to Internet.


Type1

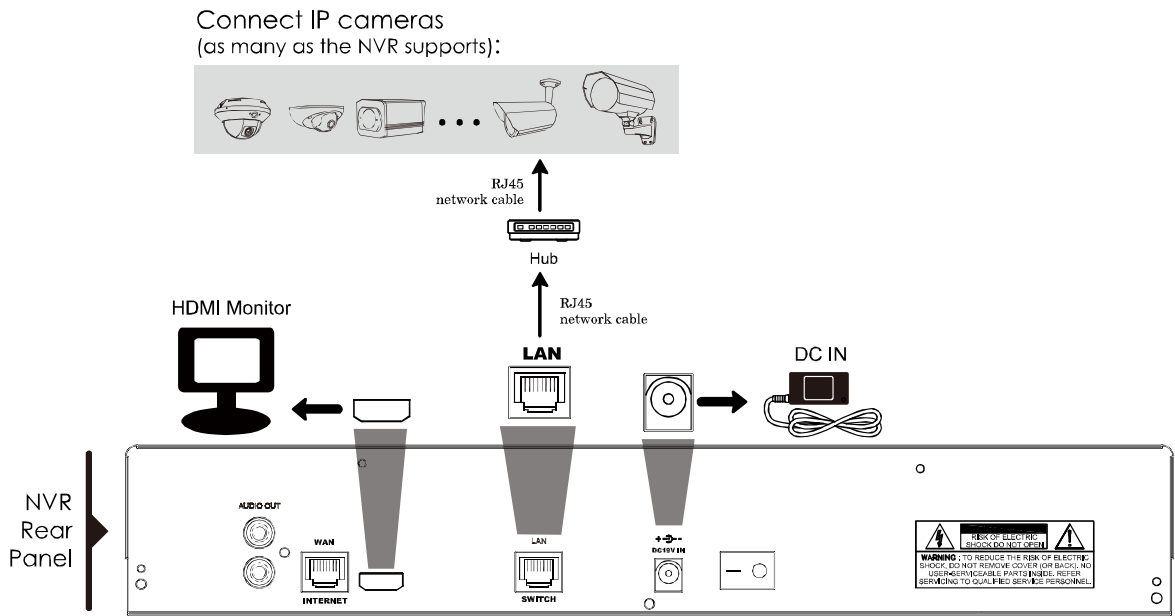


2. Wait till each camera is configured automatically and you will see camera images on the monitor soon.

Note: Local connection only allows monitoring locally. To monitor from anywhere other than the NVR is installed, please connect your NVR to Internet.

Type2

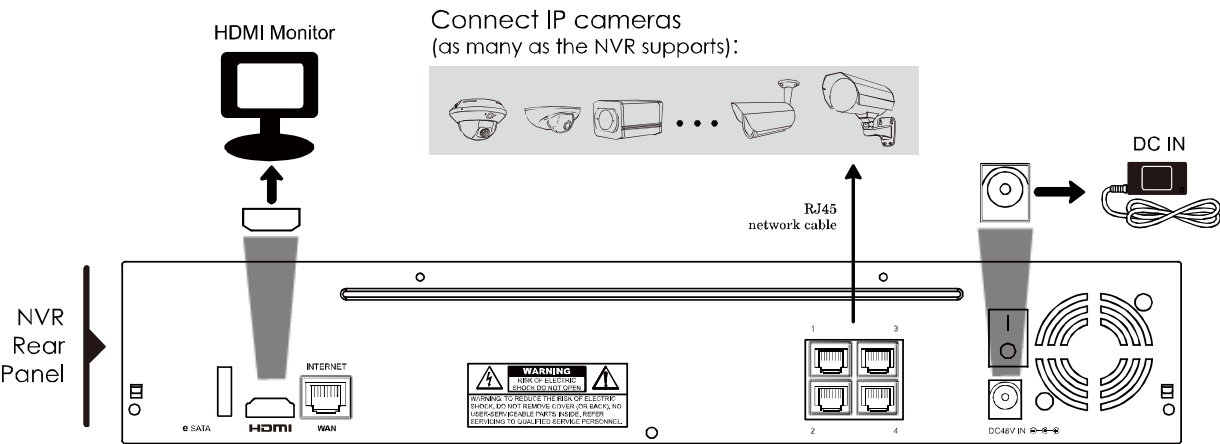

WATERPROOF KIT (Type 2 Only)

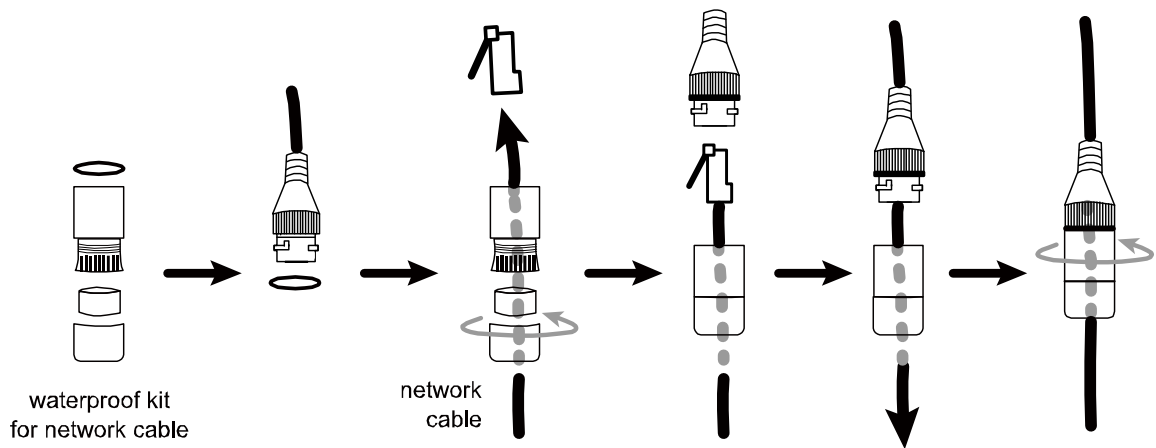


QUICK GUIDE


For more product details, please visit
www.surveillance-download.com/user/m571.swf

Package Content


Before starting to set up your camera, please make sure items below in your box:

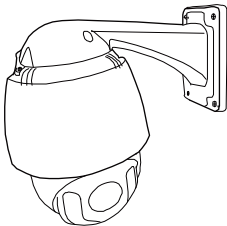

Camera



Quick Guide

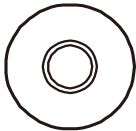

CD Manual

Cable Overview

Cable	Description
Power cable	DC12V, 1.5A power supply.
RJ45 network cable	Connect it to a RJ45 cable.
GND	Ground wire
Alarm-in	Reserved for external alarm device connection
RESET	Remove the insulating coating of wire, and twist it with a ground wire together to reset default camera
RS485A & RS485B	Used for PTZ camera or other device connection.
BNC female connector	No function.

Installation

- Step 1: Remove the two screws on the bracket. (Please refer to *Figure 1*)
- Step 2: Disconnect the inner plug and disassemble the camera into 2 parts. (Please refer to *Figure 2*)
- Step 3: Screw the bracket to the wall with four screws. (Please refer to *Figure 3*)

- Step 4: Hook the camera and the bracket. (Please refer to *Figure 4*)
- Step 5: Screw them together. (Please refer to *Figure 5*)
- Note:** To know how to install a microSD card, please refer to the next section “Insert MicroSD Card”.

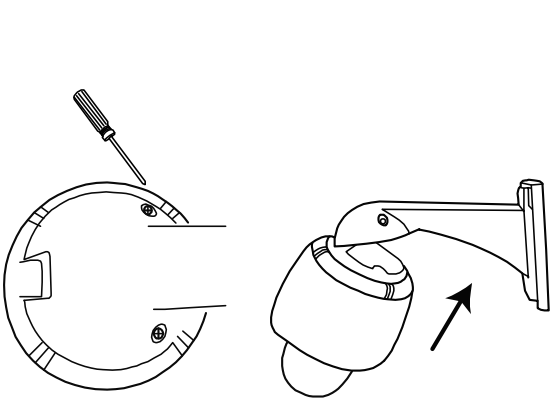


Figure 1

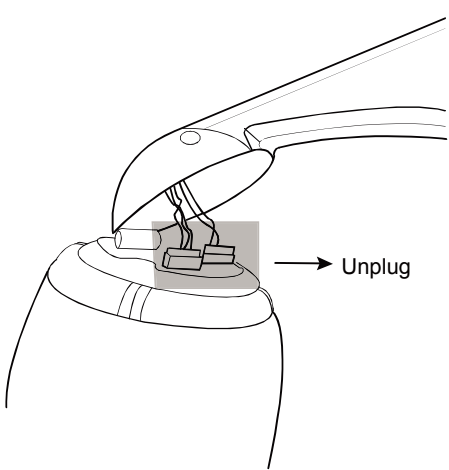


Figure 2

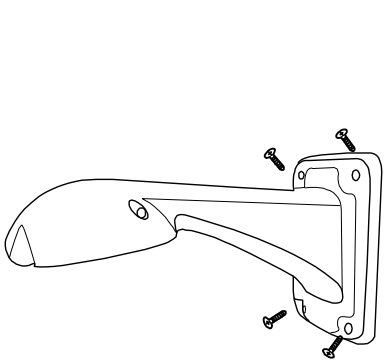


Figure 3

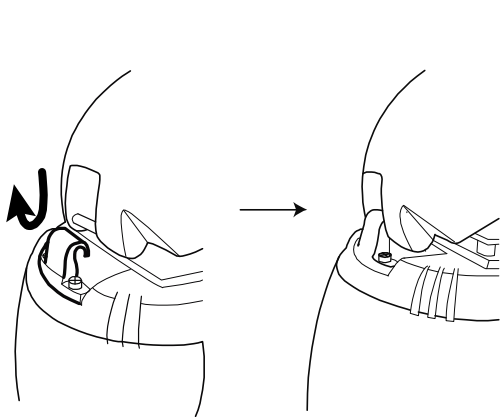


Figure 4

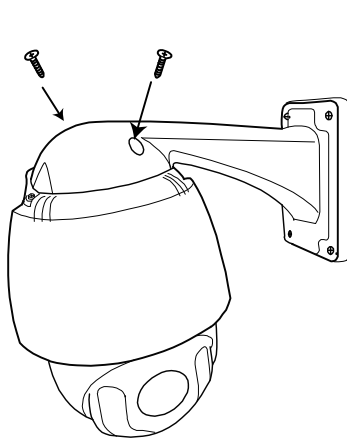


Figure 5

■ Insert MicroSD Card

Step1: Remove the four screws upside the camera lens and gently open the shell as indicated in *Figure 1*.

Step2: Remove the two screws before taking out the inner part of the lens. Then, insert the MicroSD card as indicated in *Figure 2*.

Note: The data originally saved in the microSD card (if any) will be removed after inserting it to the camera. The camera doesn't support hot-swapping. Please insert or remove the microSD card with power disconnected.

Step3: Replace the inner part of the lens and the shell back.

Note: Please make sure the shell is fastened tightly for the waterproof function to work properly.

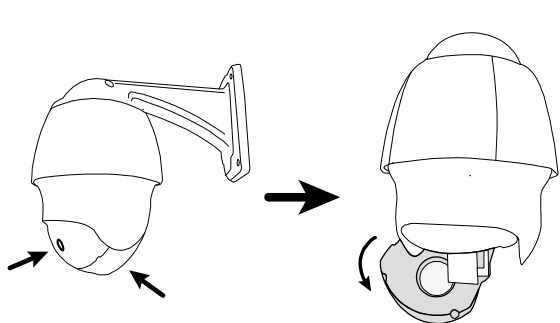


Figure 1

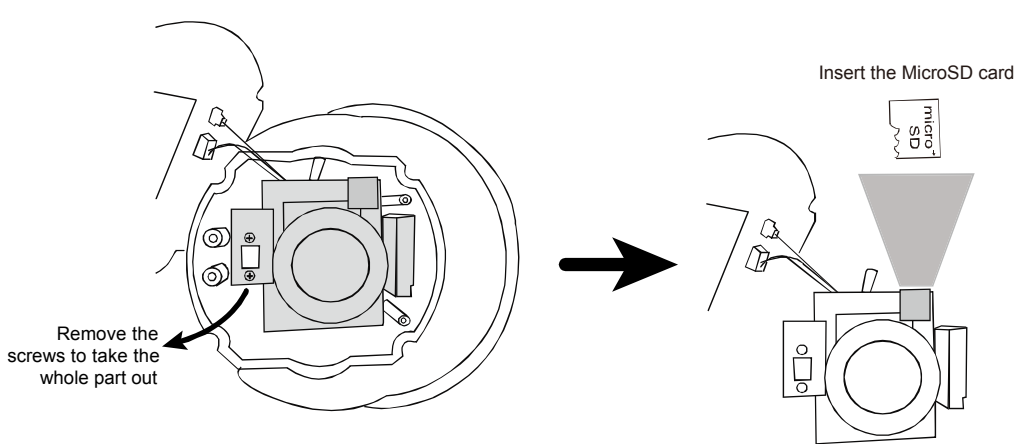


Figure 2

■ Default Values

IP address	192.168.1.10
Port number	88
User name	admin
Password	admin

It's strongly recommended to change the default user name and password before using the camera to keep your account safe.


To change the default account, log into the camera, and go to **Config.** → **General** → **Account**. Create a new account, and remove the default one.

■ Camera Configuration

Step1: Connect this camera to your NVR as described in "HD System Connection".

Step2: Connect PC to the HUB connected to your camera(s) with RJ45 network cable.

Step3: Search available devices with "IPScan.exe"; to download "IPScan.exe", please visit www.surveillance-download.com/user/IPscan.zip.

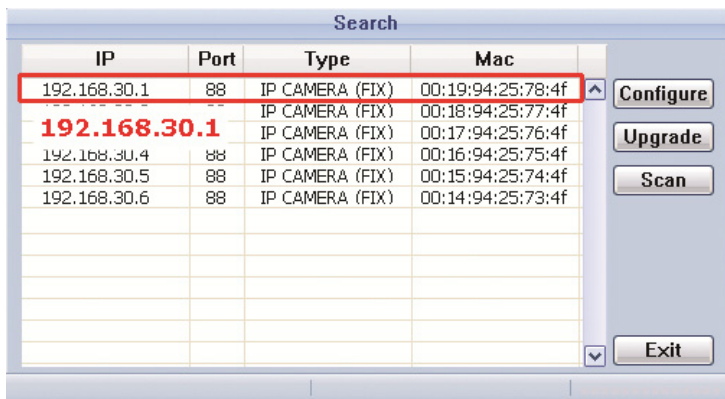

Step4: After searching, set your PC in the same network segment as the specific camera you want to access, such as "192.168.30.xxx" (xxx could be 0~255) in our example

Step5: Note down the IP address and port number of the camera you want to access, such as "192.168.30.1" and "88" in our example.

Step6: Open Internet Explorer on the PC, and enter the IP address and port number in the URL column to access the camera. The format is http://ipaddress:portnum, such as http://192.168.30.1:88 in our example.


Step7: Enter the default user name (admin) and password (admin) to access the camera. Then, go to "Config" on the top right corner for more advanced configurations.

快速安裝指南


詳情請參閱 www.surveillance-download.com/user/m571.swf

包裝明細


在開始使用之前，請先確認包裝是否含有以下內容物：

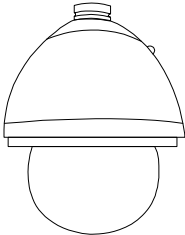


攝影機



快速安裝指南



快速使用指南

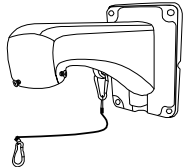

支架



螺絲備品



防水配件



說明書光碟

線材

線材	說明
電源線	連接到隨附的變壓器
RJ45 網路孔	連接到 Ethernet 網路線
端子台	
1. ALARM IN	連接警報輸入裝置用，例如磁簧開關
2. ALARM OUT	連接警報輸出裝置用，例如蜂鳴器
3. GND	接地線
4. RS485_A	用來連接 PTZ 攝影機或其他控制裝置
5. RS485_B	用來連接 PTZ 攝影機或其他控制裝置
6. GND	接地線
7. RST	剝開外膜露出裸線，然後和接地線纏在一起，即可重設攝影機。
BNC 線	沒有作用
Ain	連接麥克風做錄音
Aout	連接擴音器來播放聲音

■ 安裝方式 1

步驟 1：在要安裝攝影機的牆面先鑽好四個孔來鎖支架，然後中間一個孔讓另一側的線材通過。

註：您可以從以下位置下載安裝貼紙：
www.surveillance-download.com/user/592_installation_sticker.pdf

步驟 2：先將另一側的線材穿過支架，然後將支架鎖到牆上。

圖 1

步驟 3：將攝影機勾到支架附的掛勾上，然後先連接線材。接著，從牆面另一側拉線，將接頭拉進支架裡。

步驟 4：將攝影機嵌入支架，然後用螺絲起子鎖緊連接處的三顆螺絲，如下圖 4 所示。

圖 3

圖 4

tc_m592_quick_V0.9

■ 安裝方式 2

步驟 1：在要安裝攝影機的位置不遠處裝一個防水盒，然後將另一側的線材先接到防水盒內。

註：請確認裝入防水盒內的線材都有做好防水措施。

步驟 2：將攝影機的線材穿過支架，然後將攝影機鎖在支架上，如圖 2 所示，鎖緊連接處的三顆螺絲即可。

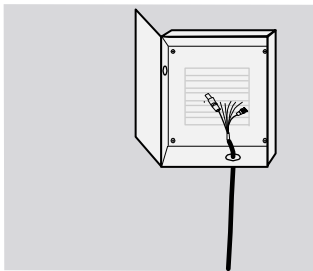


圖 1

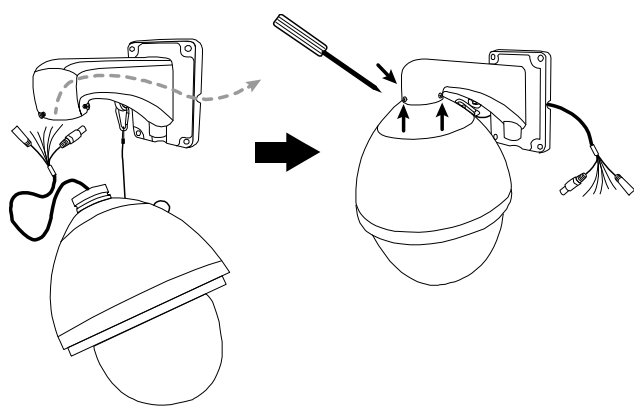


圖 2

步驟 3：在要安裝攝影機的牆面先鑽好四個孔來鎖支架。

註：您可以從以下位置下載安裝貼紙：www.surveillance-download.com/user/592_installation_sticker.pdf

步驟 4：支架上有個缺口，請將線材沿著那個缺口穿出，然後將支架鎖在牆面上，如下圖 3 所示。

註：建議使用六角螺絲來鎖支架。

步驟 5：如圖 4 所示，先將線材拉進防水盒內，然後接到在步驟 1 就先拉好的線材。

註：請確認裝入防水盒內的線材都有做好防水措施。

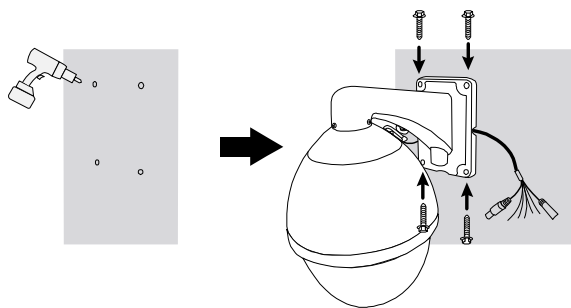


圖 3

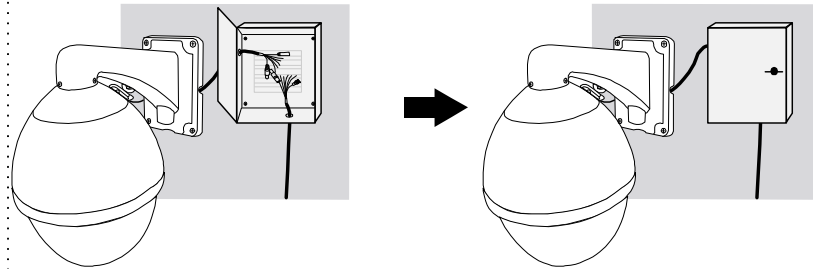


圖 4

■ IP 預設值

IP 位址	192.168.1.10
埠號	88
使用者名稱	admin
密碼	admin

強烈建議您，在使用本攝影機之前先變更預設的帳號和密碼，以防止他人未經允許登入。

若要變更預設帳號資訊，請至系統設定 → 一般設定 → 權限管理。請建立新帳號，然後再移除舊帳號。

■ 攝影機設定

步驟 1：將攝影機接到 NVR 上。

步驟 2：將電腦接到與 NVR 使用的相同的 HUB 上。

步驟 3：在開啓 IPScan.exe 來搜尋可用裝置。您可至以下位置下載 IPScan 程式。
www.surveillance-download.com/user/IPscan.zip

Search				
IP	Port	Type	Mac	
192.168.30.1	88	IP CAMERA (FIX)	00:19:94:25:78:4f	Configure
192.168.30.1		IP CAMERA (FIX)	00:18:94:25:77:4f	Upgrade
192.168.30.4	88	IP CAMERA (FIX)	00:17:94:25:76:4f	Scan
192.168.30.5	88	IP CAMERA (FIX)	00:16:94:25:75:4f	
192.168.30.6	88	IP CAMERA (FIX)	00:15:94:25:74:4f	
				Exit

步驟 4：找到攝影機後，將電腦的網段設成和攝影機相同的網段；在本例中，就要將電腦網段設成 **192.168.30.xxx (xxx 可以設成 0~255 之間的數字，但不可與攝影機相同)**。

步驟 5：記下攝影機的 IP 位址和埠號；在本例則為 **192.168.30.1** 和 **88**。


步驟 6：在電腦開啓 Internet Explorer，然後在 URL 欄輸入 IP 位址和埠號來登入攝影機。格式為 **http://位址:埠號**，在本例中即為 **http://192.168.30.1:88**。

步驟 7：輸入使用者名稱和密碼（預設為 admin），然後選擇右上角的系統設定進入攝影機進階設定選單。

■ 插入 MicroSD 卡

將 MicroSD 卡插入攝影機後，原本儲存在卡內的資料都會遺失。
攝影機並不支援熱插拔；若要取出卡片，請先將攝影機斷電後再取出。
請遵照以下指示插入 MicroSD 卡。


步驟 1：移除下圖標示的四顆螺絲取下蓋子。

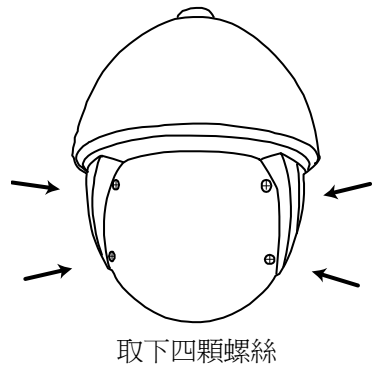

步驟 2：在取下蓋子後，您會看到內部結構。

MicroSD 卡插槽的位置如下所示，請依下圖指示插入 MicroSD 卡。


步驟 3：裝回蓋子，鎖回螺絲。請確保蓋子有鎖緊，以免喪失防水功能。

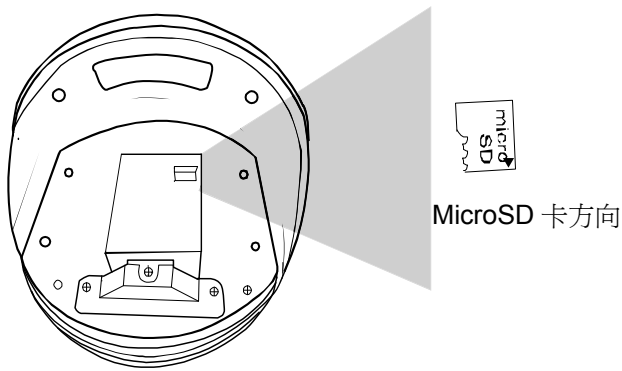

■ 設定 ID 與鮑率 (若連接的 DVR 非相同品牌時才需設定)

步驟 1：依如下圖示撕開貼紙，然後鬆開螺絲。


步驟 2：鬆開螺絲取下蓋子後，就會看到兩區指撥開關，一區各八個開關。

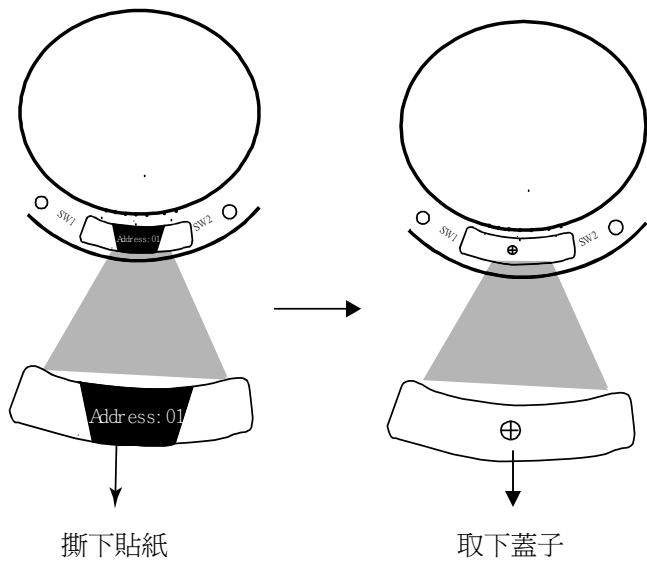

步驟 3：SW1 區設定的是 ID。

ID 可介於 0~255，設定以二進位做設定。

舉例來說，若要將 ID 設成 76，請將第 3、4 和 7 個開關往上撥（如下圖所示）。

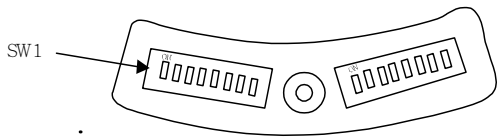

指撥開關

預設 ID：0

1	2	3	4	5	6	7	8


自設 ID：76

1	2	3	4	5	6	7	8

步驟 4：SW2 區設定的是鮑率；

鮑率為 2400、4800、9600、19200 和 38400，相對應數字分別為 0、1、2、3 和 4，設定以二進位做設定。

舉例來說，若要將鮑率設成 19200，其對應數字為 3，所以需將指撥開關的第 1 和 2 開關往上撥。

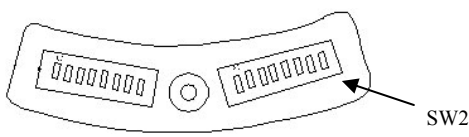

指撥開關

預設鮑率：2400 (0)

1	2	3	4	5	6	7	8

自設鮑率：19200 (3)

1	2	3	4	5	6	7	8


Guía Rápida Para más detalles, por favor visite; www.surveillance-download.com/user/m571.swf	■ Contenido del Paquete Antes de comenzar a configurar su cámara, asegúrese de que la caja contenga los siguientes elementos: Cámara Guía Rápida Note: Esta cámara requiere de un montaje para su instalación. Se vende por separado.	■ Montaje Opcional Este es el montaje que se usa para esta cámara y no viene incluido en la compra de la cámara. Por favor adquiérala por separado. Montaje Base Accesorios: x 3 Hex screw nut x 2 Mounting base screw x 4 Wall screws and plugs x 3 M6 Nylok screw (long) x 1 M4 screw x 1 Bracket screw (Phillips) x 2 M6 Nylok screw (short) x 1 Bracket screw (hex socket) x 1 Cap
---	---	--

■ Instalación


Paso1: Encuentre el Soporte y quite la tapa superior e instale el montaje en la pared. Antes de fijar el montaje en la pared asegúrese de cómo irá el cableado:

- Para un cableado a lo largo del muro, pase el cable a través de uno de los huecos de la base.
- Para el cableado a través de la pared, recuerde que debe de hacer un agujero lo suficientemente grande para que el cable pase por él.


Paso 2: Fije el Soporte a la pared.

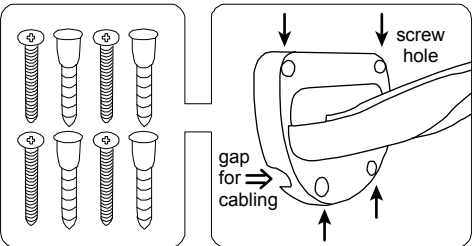


Paso 3: Inserte las tuercas hexagonales a la base del montaje y gire.

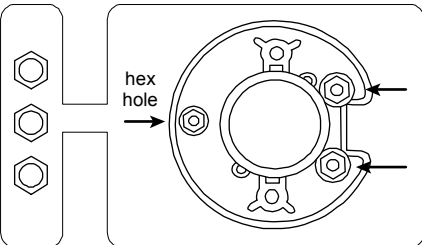

Paso 4: Busque “→” en la cámara. Entonces, coloque y fije la base del montaje de la cámara como se indica a continuación:

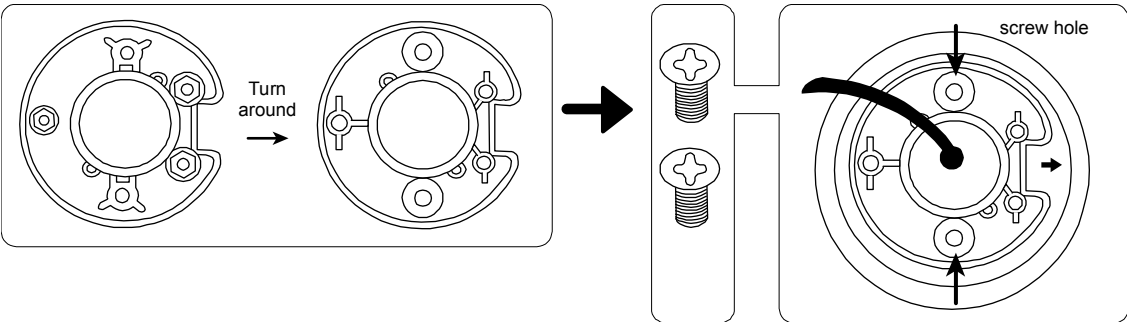


Paso 5: Fije y apriete ligeramente la cámara en el Soporte como se indica a continuación. La cámara está fija.

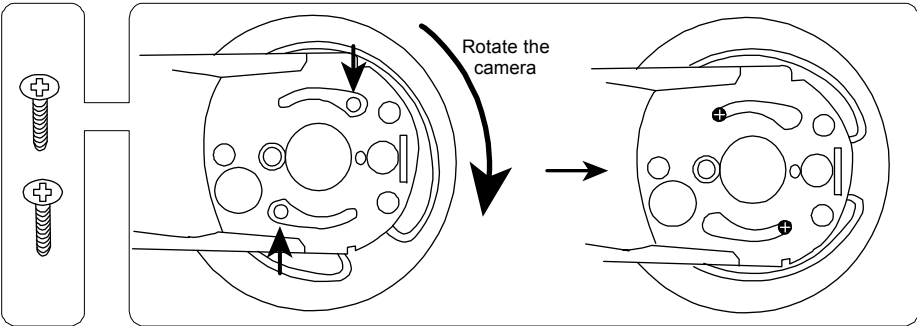


■ Instalación (Continuación)


Paso 6: Ligeramente fije la cámara como se indica a continuación.

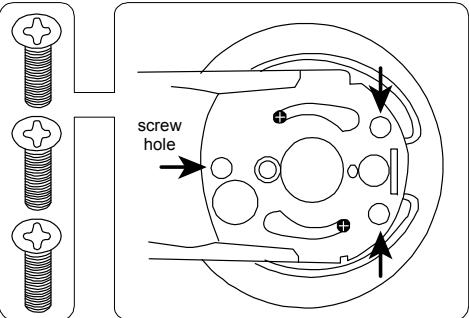

Paso 7: Sujetar la cámara al Soporte con el tornillo M4 como se indica a continuación.

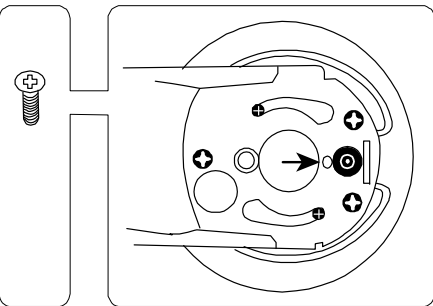

Paso 8: Vuelva a colocar la cubierta superior del Soporte y apriete con un desarmador Philips o un dado y ponga la tapa para terminar la instalación.

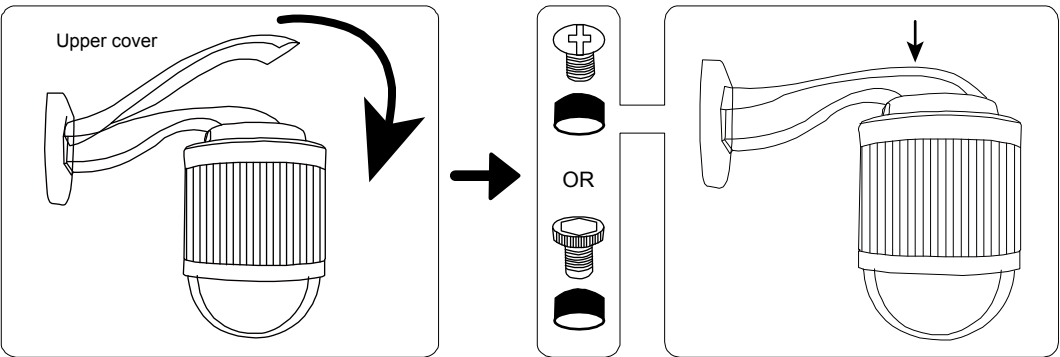

■ Información del cable

Color	Cable	Description
--	Cable de Energía	Fuente de Alimentación 12VCD.
--	Cable de Red RJ45 *	Conecte un cable RJ45.
Black & Brown	GND	Cable a Tierra
Yellow	Alarm-in	Para conectar una dispositivo de alarma exterior
Pink	Alarm-out	Para conectar un dispositivo de alarma exterior
Red	RESET	Quite el aislante del cable y una con el cable de tierra para regresar a valores de fábrica la cámara.
Blue	Line in	Conecte a line-in un micrófono para grabar audio.
Green	Line out	Conecte a line-out unas bocinas para la salida de audio.


* Por instalación PoE (IEEE802.3af), asegúrese que su cable de red tenga menos de 20Ω con cable CAT.5e o CAT.6, conforme al estándar de IEEE802.3af.

■ Configuración de la Cámara

Paso1: Conecte su cámara al NVR como se muestra en “HD System Connection”.

Paso 2: Conecte su PC al mismo switch en donde está conectada su cámara con un cable de Red RJ45.

Paso 3: Busque todas las cámaras conectadas a su red con “IPScan.exe”; para descargarla por favor visite .



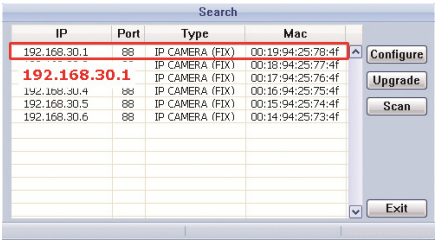


Paso 4: Después de la búsqueda y de configurar su PC en el mismo segmento de red que usted desea acceder, como por ejemplo “192.168.30.xxx” (xxx puede ser 0~255) en nuestro ejemplo.


Paso 5: Anote la dirección IP y el Puerto de la cámara que desea acceder, como por ejemplo “192.168.30.1” y “88” en nuestro ejemplo.

Paso 6: Abra Internet Explorer en su PC e ingrese la dirección IP y el número de puerto en la URL para acceder a tu cámara. El formato es http://ipaddress:portnum, por ejemplo <http://192.168.30.1:88> en nuestro ejemplo.


Paso 7: Ingrese el usuario default (**admin**) y su contraseña (**admin**) para acceder a la cámara. Mientras, va a “Config” en la esquina superior derecha en Configuraciones Avanzadas.

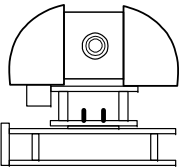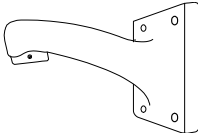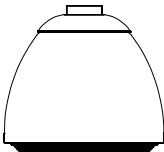GUIA RAPIDA Para más información visite www.surveillance-download.com/user/m571.swf	■ Contenido del Paquete Por favor antes de comenzar revise que su paquete contenga  Cámara  Guia Rapida Nota: Esta cámara requiere un bracket o soporte, un housing y una cubierta domo para su instalación. Esto se adquiere por separado.	Soporte y Housing OPCIONALES A continuación se muestra el soporte que se debe de utilizar con ésta cámara y el cual NO está incluido en este paquete, por favor adquieralo ya que se vende por separado.  Soporte  Housing  Cubierta Domo Accesorios:  Wretch  Screws
--	--	---


■ Instalación

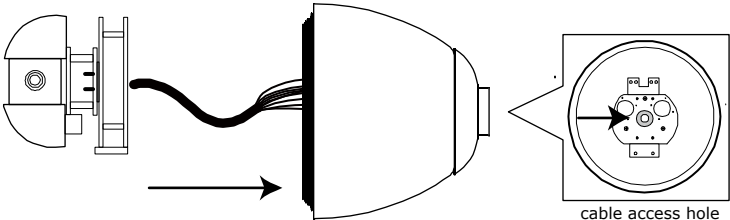- Paso 1 A: (Opcional) Inserte la tarjeta micro SD, si es necesario
- Paso 1: Pase los cables de la cámara a través del agujero en el centro de la carcasa.
- 

cable access hole
- Paso 2: Alinee los agujeros de los tornillos de la placa de la cámara con los cuatro orificios para tornillos del soporte. A continuación, fije el módulo a la caja con los cuatro orificios de los tornillos suministrados.

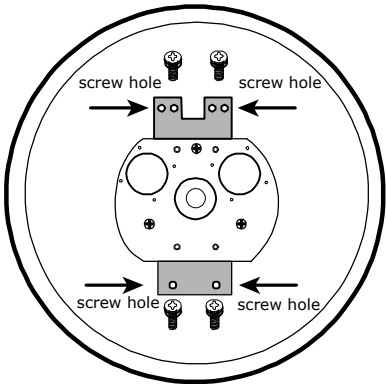


- Paso 3: Pase los cables de nuevo a través del soporte, bloquee la carcasa con la llave al soporte.
- Paso 4: En función de su instalación, puede organizar los cables de forma que:
- 1) los pueda esconder detrás de la pared por la perforación de un agujero, o
 - 2) esconderlos a lo largo de la pared.
- A continuación, fije el soporte a la pared con cuatro tornillos.
- Nota:** Los cuatro tornillos utilizados para asegurado el soporte a la pared no están incluidos en el paquete de venta

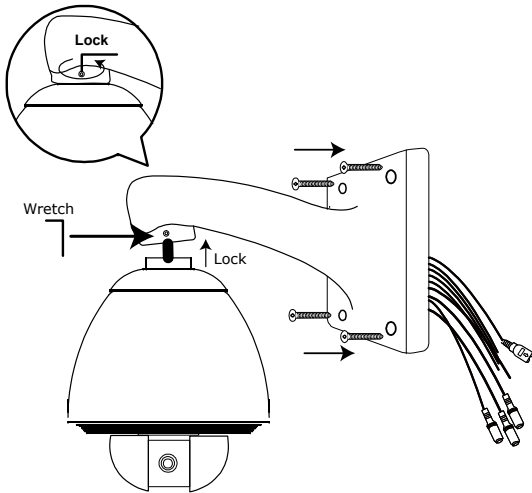

■ Instalación (Continuación)

Paso 5: Coloque el domo del housing y girarlo en sentido antihorario para fijar.

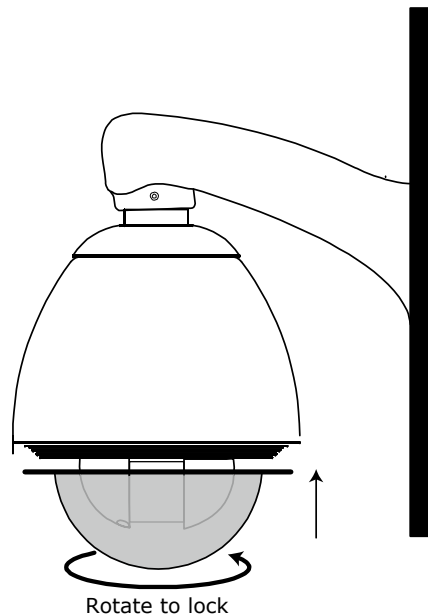


■ Para insertar Micro SD

Los datos originalmente almacenados en la tarjeta microSD (si las hay) serán eliminados después de insertarla en la cámara.

La cámara no admite el intercambio de tarjeta en modo operación. Por favor, insertar o extraiga la tarjeta microSD con el producto desconectado. Por favor, siga las siguientes instrucciones para insertar la tarjeta microSD correctamente:

Paso 1: Oriente la lente con la placa PCB para encontrar la ranura de la tarjeta microSD como la ilustración de la derecha.

Step2: Inserte con los contactos dorados hacia arriba de la tarjeta microSD e inserte.

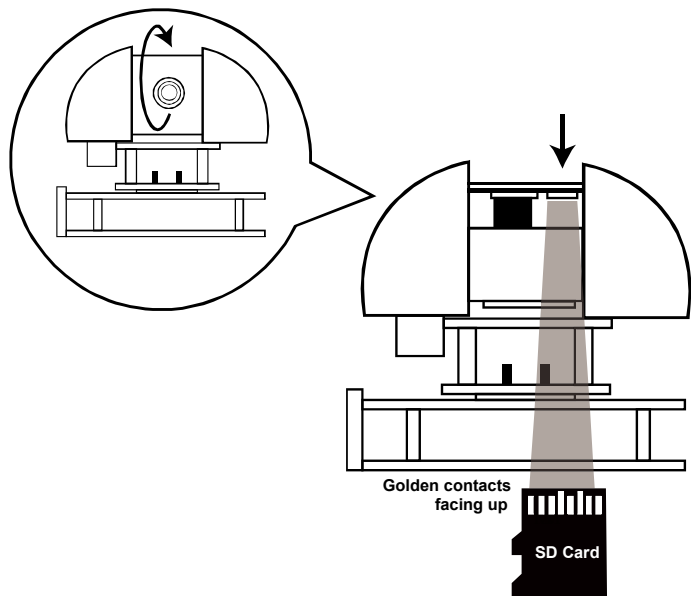

■ Cableado

Cable	Descripción
Power cable	Cable de fuente de poder de 12 V cc 1.5 A
RJ45 network cable*	Cable para conectar al RJ45 .
GND	Tierra
Alarm-in	Exclusivo para conectar una alarma externa. (Entrada)
Alarm-out	Exclusivo para conectar una alarma externa. (Salida)
RESET	Retire el revestimiento aislante del alambre, y girar con un cable de tierra para resetear cámara.
Line in (Blue)	Cable Azul: Conecte a un dispositivo de entrada de línea, es decir, un micrófono, para la grabación de audio
Line out (Green)	Cable Verde: Conecte a un dispositivo de salida de línea, es decir, el altavoz, para la salida de audio


* Para instalación PoE (IEEE 802.3af), asegúrese de que el cable de red tiene la resistencia máxima de 20Ω, como CAT.5e o cables CAT.6, para cumplir con el estándar de IEEE 802.3af.

■ Configuración de Cámara

Paso 1: Conecte la cámara a su NVR como se describe en "Conexión de alta definición del sistema".

Paso 2: Conecte el PC al HUB conectado a su cámara (s) con cable de red RJ45.

Paso 3: Buscar dispositivos disponibles con "IPScan.exe"; descargar "IPScan.exe", por favor visite www.surveillance-download.com/user/IPscan.zip.

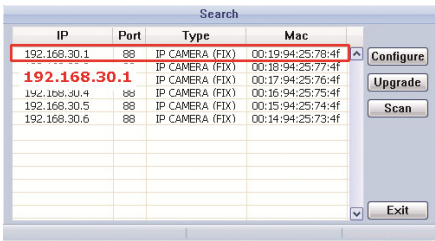

Paso 4: Después de buscar, pon tu PC en el mismo segmento de red que la cámara específica que desea tener acceso, como "192.168.30.xxx" (xxx puede ser 0 ~ 255) en nuestro ejemplo

Paso 5: Anote la dirección IP y número de puerto de la cámara que desea tener acceso, como "192.168.30.1" y "88" en nuestro ejemplo.

Paso 6: Abra Internet Explorer en la PC, y escriba la dirección IP y número de puerto en la columna de la dirección URL para acceder a la cámara. El formato es http://ipaddress:portnum, como http://192.168.30.1:88 en nuestro ejemplo.

Paso 7: Introduzca el nombre predeterminado de usuario (admin) y la contraseña (admin) para acceder a la cámara. Luego, ir a "Configuración" en la esquina superior derecha para configuraciones más avanzadas.