

KVM CAT5 Extender

KVM-E500

Quick Installation Guide

Table of Contents

Chapter 1 Introduction	3
1.1 Features	3
1.2 Package Contents	3
1.3 Technical Specifications	4
Chapter 2 Installation.....	5
Chapter 3 Troubleshooting	7

Chapter 1 Introduction

The KVM-E500 is using an inexpensive Category 5 cable to extend the distance between control console and a computer system. The maximum extension distance can be up to 500 feet (150m). The KVM-E500 is guaranteed to provide high video resolution to 1280 x 1024 even using 500 feet CAT5 cable.

The KVM-E500 is the ideal solution for isolated server rooms, test sites, or secure systems where the computers ought to keep away from the public. No software is required, and Plug & Play installations reduce the efforts while deploying KVM-E500 to work field.

1.1 Features

- Use CAT5, CAT5e, or CAT6 Ethernet cable to connect Transmitter and Receiver units
- Extension distance is up to 500 feet (150m)
- High video resolution up to 1280 x 1024
- The provided local and remote consoles allow users to perform the management nearby or faraway
- No software is required
- Plug and Play installation

1.2 Package Contents

KVM-E500 Transmitter x 1
KVM-E500 Receiver x 1
3 feet 3-in-1 KVM cable x 1
Quick Installation Guide x 1
Power Adapter x 1


1.3 Technical Specifications

	Transmitter	Receiver
Console port connector (all female type)	PS/2 keyboard port	PS/2 keyboard port
	PS/2 Mouse port	PS/2 Mouse port
	VGA port	VGA port
PC port connector (all female type)	PS/2 keyboard port	-
	PS/2 Mouse port	
	VGA port	
RJ-45 port	1	1
Cable type	TIA/EIA-568, Category 5/5E/6 cable	
Maximum cable length	500 feet (150m)	
LED	Power, Status	
Knobs (for VGA tuning)	-	1
VGA resolution	Up to 1280 x 1024	
Dimensions (L x W x H)	111.5 x 75 x 35.5mm	111.5 x 75 x 39.5mm
Weight	134g	120g
Power	-	12V DC, 1A
Regulatory compliance	FCC, CE	

Chapter 2 Installation

Before installation, please make sure all of peripherals and computers have been turned off.

1. Using the included KVM cable, connect one of the male VGA connectors to a computer or a KVM switch.
2. Connect the PS/2 connectors to the keyboard and mouse ports. Please pay attention to which cable connects to which port.
3. Connect the other end of the KVM cable to the PC side of the KVM-E500 Transmitter.

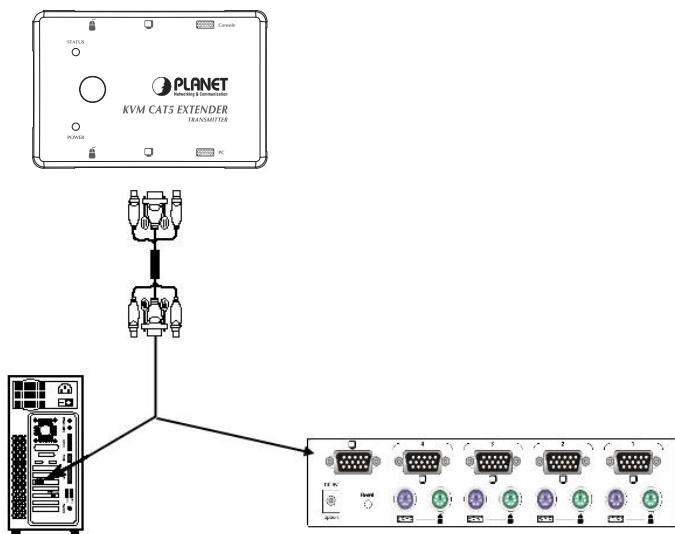


4. Connect a set of monitor, keyboard, and mouse to the KVM-E500 Receiver. If you want to have a local console, you can connect another set to the CONSOLE side of KVM-E500 Transmitter as well.



Note

please avoid using a specialized keyboard or mouse on the KVM-E500 Receiver.

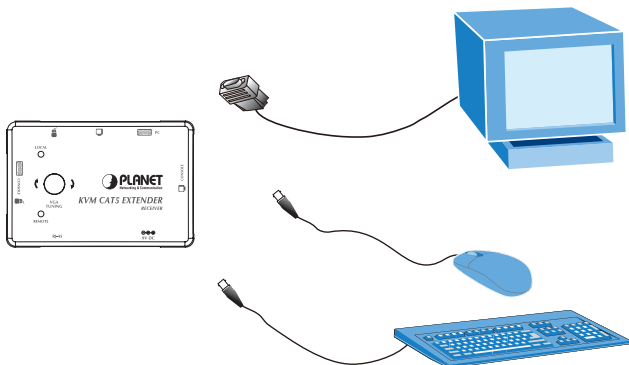

5. Use a CAT5 cable to connect the Transmitter and Receiver. If the cable length is over 300 feet, please adjust the DIP switch 1 and 2 of the Transmitter to ON position.
6. Connect the power adapter to KVM-E500 Receiver.
7. Power on the computers and KVM switch.
8. The video quality is adjustable in remote console by turning the VGA TUNING knob to get the optimal resolution.

Chapter 3 Troubleshooting

1. No video signal is displayed on the monitor.
 - 1.1 Please ensure all of VGA cables & connector and CAT5 cable & connector are securely connected.
 - 1.2 VGA cable was not attached to computer during boot up process. Please make sure the VGA cable is attached and reboot the computer.
 - 1.3 Please ensure the power adapter is plugged into the Receiver.
2. Video signal is foggy or un-cleared on the screen, please check VGA connector, or the VGA resolution is too high for the length of cable being used. If the issue is related to VGA resolution, please shorten the CAT5 cable length or lower the VGA resolution. It is highly recommended to use "optimal CAT5 cable length" to get the best video quality and don't waste unnecessary CAT5 cable.



The highest VGA resolution is up to 1280 x 1024 (CAT5 cable length up to 500 feet approximately)

3. There is an error message: "keyboard or Mouse not found" on the screen. Please make sure PS/2 cable and connector is well seated.
4. For USB computers like PC, MAC or SUN Microsystems, please apply USB to PS2 converter to KVM-E500.
5. The computer boot up fine, but keyboard doesn't work
 - 5.1 Make sure the keyboard works when directly plugged into the computer.
 - 5.2 Try a different keyboard, but use only 101, 102 or 104-key keyboard.

■

6. The Mouse is not detected during PC boot up.

6.1 Make sure the mouse works when directly plugged into the computer.

6.2 Make sure the mouse is a true PS/2 mouse. A combo mouse will work just as long as it is set for PS/2 mode with the correct adapter.

6.3 Try a different mouse.