



GV-Failover Server

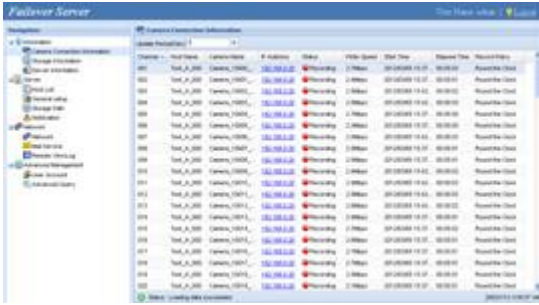

INTRODUCTION

GV-Failover Server is a video backup server that records up to 128 channels from GV-NVR, GV-VMS or GV-Recording Server when any of the following conditions occurs: (1) the GV server starts up without recording; (2) the file recycling fails; (3) the hard drive fails; (4) the connection between GV server and IP cameras fails; (5) the GV server fails to function properly.

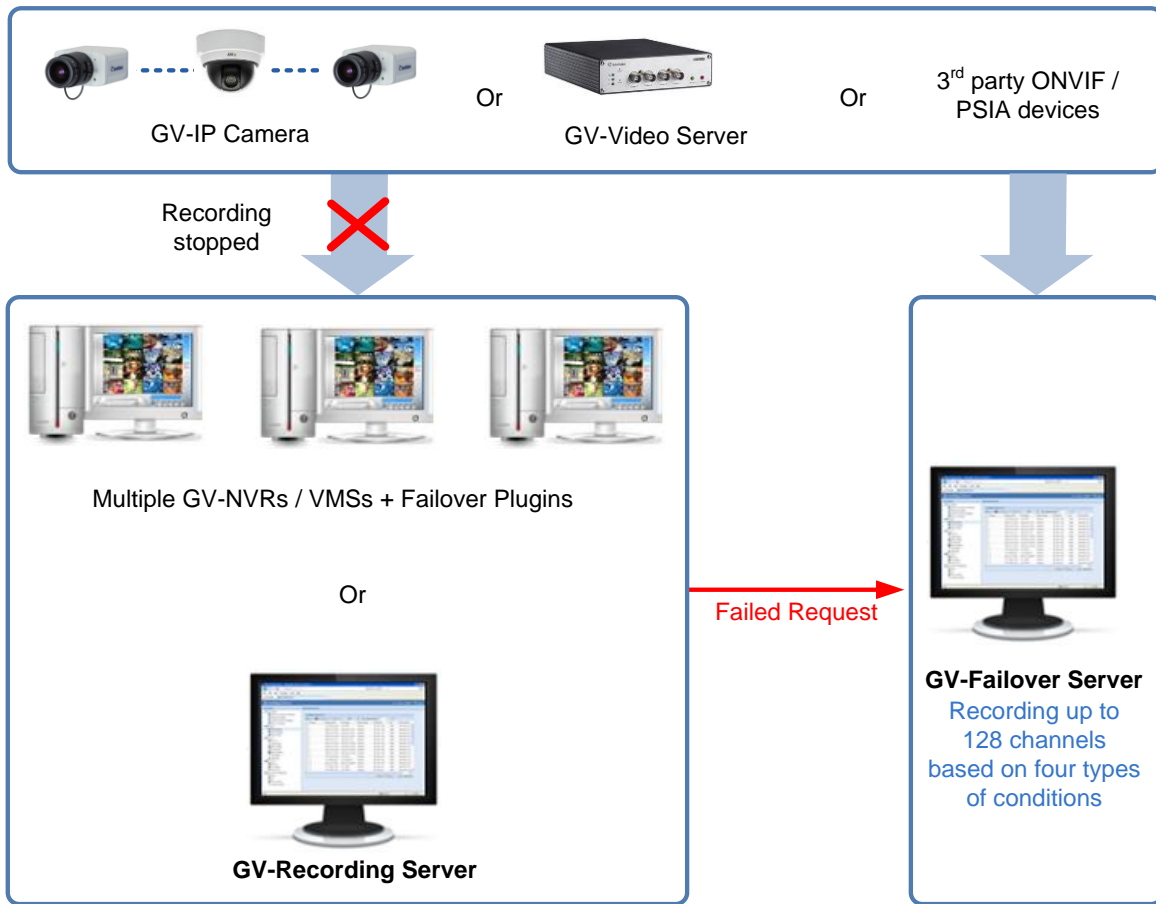

Note:

1. GV-Failover Server does not support GV-VMS hosts in service mode. It is highly suggested not to enable "Service Mode" on GV-VMS.
2. GV-Failover Server does not support backup of analog cameras.
3. It is highly recommended to connect to no more than 128 IP streams from hosts GV-NVR / VMS / GV-Recording Server. For example, you can connect to:
 - Four 32-ch GV-VMS. OR
 - Two 64-ch GV-VMS. OR
 - One 128-ch GV-Recording Server

Features

- Up to 128 IP channels recording
- Round-the-clock recording
- Video playback using Remote ViewLog
- Remote configuration and monitoring of GV-Failover Server using Internet Explorer, Firefox, Google Chrome and Safari
- Support for third-party IP device brands (Arecont Vision, Axis, HikVision, Panasonic, Sony, VIVOTEK)
- Support for ONVIF, PSIA and RTSP protocols
- 31 languages supported on the Web interface

Minimum System Requirements

Servers meeting the following minimum system requirements have the capacity to receive up to 128 channels.

OS	64-bit Windows 10 / Server 2016
CPU	Core i5 750, 2.67 GHz
Memory	6 GB Dual Channels
Hard Disk	1 GB. (for installation)
Browser	<ul style="list-style-type: none"> • Internet Explorer 8.0.7600.16385 • Internet Explorer 9.00.7930.16406 • Firefox 3.6.13 • Google Chrome 9.0.597.94 • Safari 5.33.19.4
LAN	Gigabit Ethernet X 1
Hardware	Internal or external GV-USB Dongle
Software	<ul style="list-style-type: none"> • .Net Framework 3.5 for Windows 10 / Server 2016

Note: It is recommended to use the internal GV-USB Dongle to have the Hardware Watchdog function which restarts the PC when Windows crashes or freezes.

Software License

Free License	N/A
Maximum License	128 channels
Increment for Each License	N/A
Optional Combinations	N/A
Dongle Type	Internal or external

Recommended Hardware Requirements

The recommended hard disk requirements for 24 hours of recording are detailed below.


Resolution	Frame rate	Codec	Max. Channel per HDD and Required HDD Capacity	HDD capacity required for recording 128 ch for 24 hr	Recommended HDD Requirements
1.3 M	30 fps	H.264 / MPEG4	32 ch / 2.5 TB	10 TB	3 TB 7200RPM HDD x 4 (SATA3)
		JPEG	8 ch / 2.7 TB	43.2 TB	3 TB 7200RPM HDD x 16 (SATA3)
2.0 M	30 fps	H.264	21 ch / 2.2 TB	13.5 TB	3 TB 7200RPM HDD x 7 (SATA3)
		JPEG	5 ch / 2.5 TB	64 TB	3 TB 7200RPM HDD x 26 (SATA3)
3.0 M	20 fps	H.264	32 ch / 3 TB	12 TB	3 TB 7200RPM HDD x 4 (SATA3)
		JPEG	4 ch / 2 TB	64 TB	3 TB 7200RPM HDD x 32 (SATA3)

Options

Optional Devices	Description
Internal USB Dongle	The USB dongle can provide the Hardware Watchdog function to the GV-Failover Server by restarting the computer when Windows crashes. You need to connect the dongle internally on the motherboard.

Network Requirements

For optimal performance and processing efficiency, it is advisable to use two Gigabit connections, each assigned with 64 channels and run through separate network. The suggested deployment of Gigabit connections for recording is illustrated below.

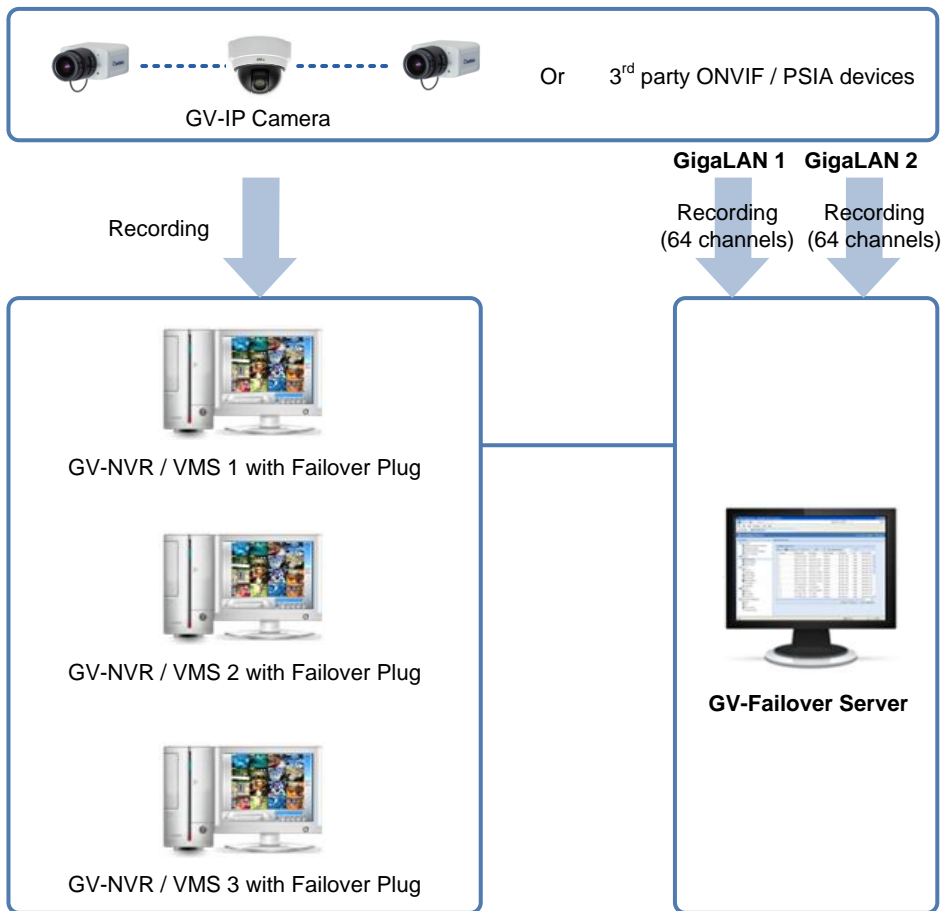

Packing List

- GV-USB dongle
- Software DVD

IP Camera Support List

The following camera brands and models have been tested for compatibility with GV-Failover Server. Note that GV-Failover Server V1.1.0.0 only supports IP devices with V8.5.9.0 or earlier versions listed under the GV S/W column in the support list.

GeoVision	Arecont Vision	AXIS	HikVision
Panasonic	Sony	VIVOTEK	

Compatible Standard and Protocol

GV-Redundant Server also allows for integration with all other IP video devices compatible with ONVIF (V2.0), PSIA (V1.1) standards, or RTSP protocol.

ONVIF	PSIA	RTSP	
--------------	-------------	-------------	--

Specifications

Feature	Device
Client	GV-NVR / VMS / GV-Recording Server
Dongle	Up to 128 IP channels
3rd Party IP Cameras Support	Yes
Recording Mode	Records when: 1. host GV-NVR / VMS / GV-Recording Server is connected but not recording. 2. recycling of video files fails at host GV-NVR / VMS / GV-Recording Server. 3. an error occurs in the hard drive at host GV-NVR / VMS / GV-Recording Server. 4. the connection between hosts and IP camera fails. 5. the host GV-NVR / VMS / GV-Recording Server fails.
Protocol	DynDNS, HTTP, HTTPS, SMTP, ONVIF, PSIA, RTSP, TCP, UDP
Live Viewing	No
Playback	using Remote ViewLog Via web page
	Yes (Remote ViewLog V8.5.3 or later)
	Yes
Recycle Threshold for Video Files	Yes
Event Log	Yes
Recycling days & threshold for Event Logs	Yes
S/W & H/W Watchdog	Yes
E-mail Notification	Yes (camera connection loss, removal of USB protection key, recycling of recorded video, start keep days operation, disk full, disk error, removal of hard disk, recording failure)
Number of User Accounts	Up to 1000 accounts
Support for Internet / LAN	Yes
Mobile Phone Support	No
Bandwidth Control	No
IE Event Query	Yes
IE I/O Control	No
Language on Web Interface	Arabic / Bulgarian / Czech / Danish / Dutch / English / Finland / French / German / Greek / Hebrew / Hungarian / Indonesian / Italian / Japanese / Lithuanian / Norwegian / Persian / Polish / Portuguese / Romanian / Russian / Serbian / Simplified Chinese / Slovakian / Slovenian / Spanish / Sweden / Thai / Traditional Chinese / Turkish

IMPORTANT:

1. GV-Failover Server and GV-Recording Server cannot be run on the same PC.
2. GV-Failover Server is only compatible with GV-Recording Server V1.2.5 ~ V1.4.2.